



Windshield Washer Pump Replacement

Removal Procedure

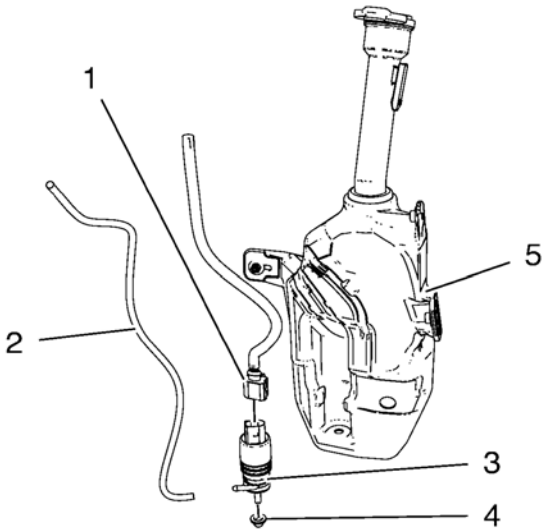

1. Remove the front wheelhouse liner. Refer to [Front Wheelhouse Liner Replacement](#).
2. Disconnect the washer pump electrical connector (1).
3. Disconnect the washer pump hose (2) from the washer pump (3).
4. Using a small flat-bladed tool, remove the washer pump from the washer solvent container (5).
5. Drain the windshield washer solvent into a clean suitable container.
6. Using a small flat-bladed tool, remove the washer pump terminal seal (4) from the washer solvent container (1).

Installation Procedure

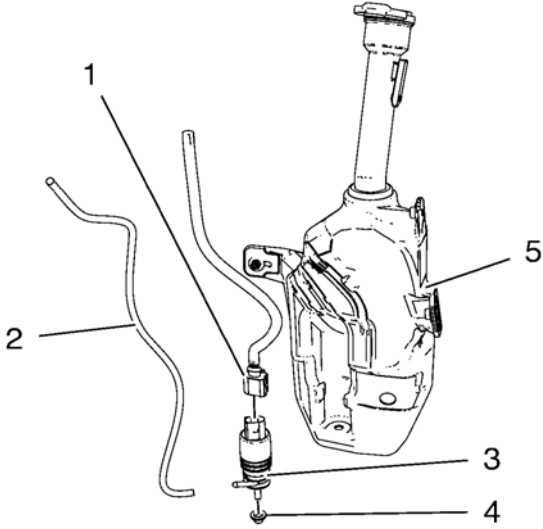

1. Position the washer pump terminal seal (4) to the washer solvent container (5), pressing in until fully seated.
2. Using full strength windshield washer solvent as a lubricant on the terminal seal, position the washer pump (3) to the washer solvent container (5) pressing in until fully seated.
3. Connect the washer pump electrical connector (1).
4. Connect the washer pump hose (2) to the washer pump (5).
5. Install the front wheelhouse panel splash shield. Refer to [Front Wheelhouse Liner Replacement](#).
6. Fill the washer solvent container with washer solvent.
7. Inspect the washer system for proper operation.