


Air Conditioning Evaporator Hose Assembly Replacement

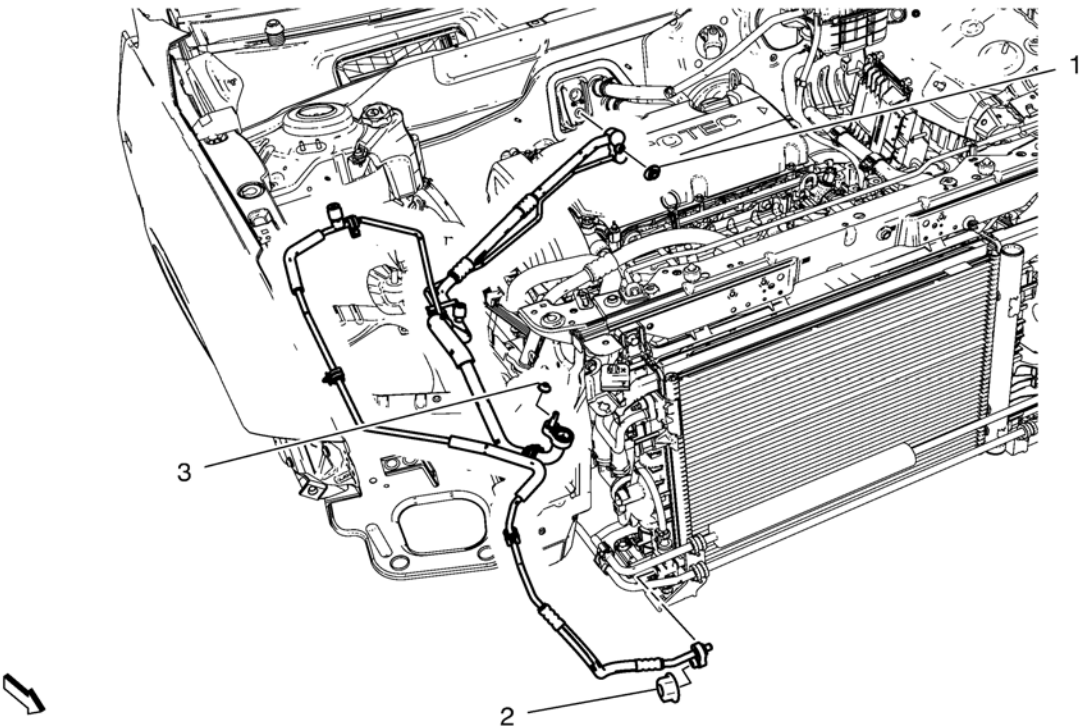

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Recover the refrigerant. Refer to Refrigerant Recovery and Recharging.</p> <p>2. Remove the headlamp - right side. Refer to Headlamp Replacement.</p> <p>3. Loosen power steering fluid reservoir screw.</p> <p>4. Remove brake pipes from the dash lower extension panel.</p> <p>5. Remove engine mount. Refer to Engine Mount Replacement.</p>	
1	<p>Air Conditioning Evaporator Hose Assembly Nut to Air Conditioning Evaporator Thermal Expansion Valve</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 19 N·m (14 lb ft)</p>
2	<p>Air Conditioning Evaporator Hose Assembly Nut to Air Conditioning Condenser</p> <p>Tighten 19 N·m (14 lb ft)</p>
3	<p>Air Conditioning Evaporator Hose Assembly Nut to Air Conditioning Compressor and Condenser Hose</p> <p>Tighten 19 N·m (14 lb ft)</p>