


## Hood Primary Latch Release Cable Replacement

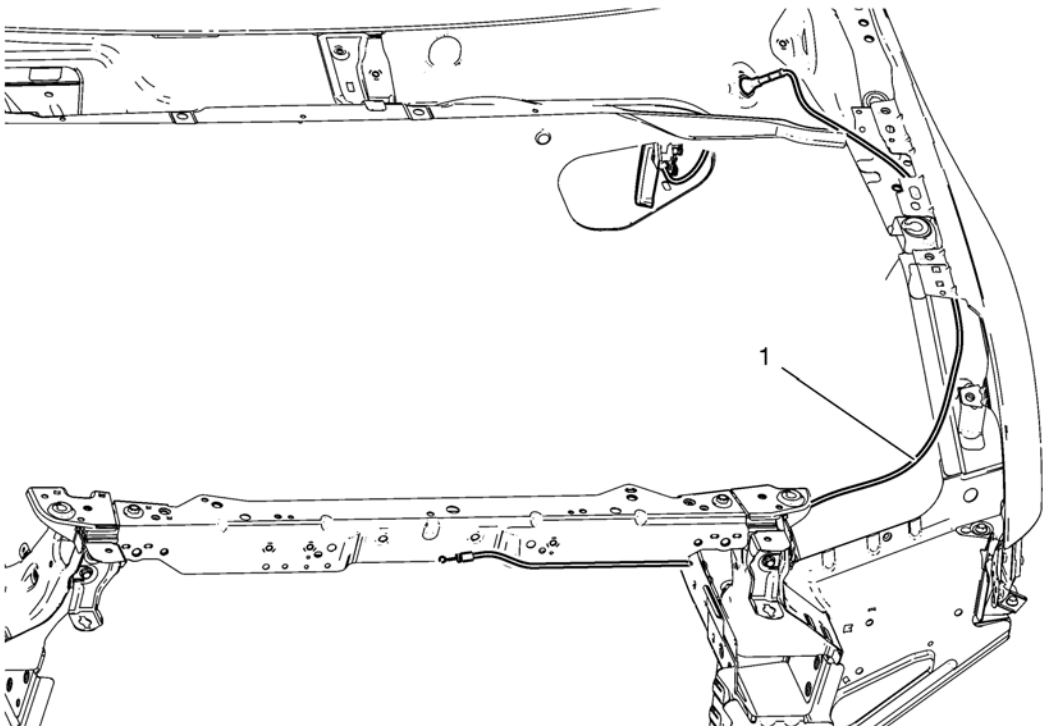

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>1. Remove hood primary latch release cable handle. Refer to <a href="#">Hood Primary Latch Release Cable Handle Replacement</a>.</p> <p>2. Remove the front bumper fascia. Refer to <a href="#">Front Bumper Fascia Replacement</a>.</p> <p>3. Remove the radiator grille support. Refer to <a href="#">Radiator Grille Reinforcement Support Replacement</a>.</p> <p>4. Remove the air inlet grille panel. Refer to <a href="#">Air Inlet Grille Panel Replacement</a>.</p>	
1	<p>Hood Primary Latch Release Cable</p> <p><b>Procedure</b></p> <p>To release the hood primary latch release cable, unhook from hood primary and secondary latch.</p>