


Generator, Air Conditioning Compressor, and Power Steering Pump Belt Replacement


Removal Procedure

1. Raise the vehicle full height. Refer to [Lifting and Jacking the Vehicle](#).
2. Remove the front compartment splash shield. Refer to [Front Compartment Splash Shield Replacement](#).

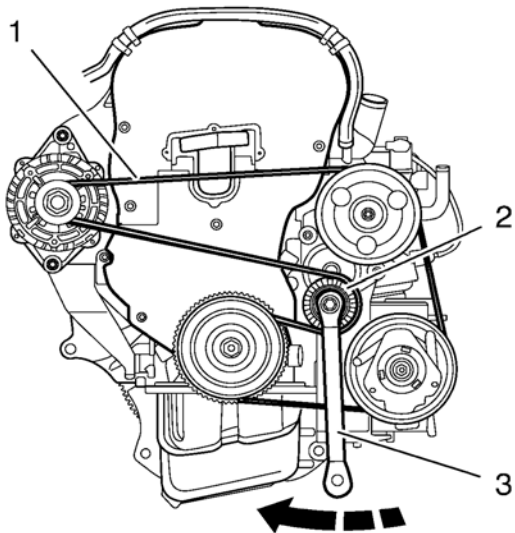

3. Rotate the drive belt tensioner bolt (2) clockwise.
4. Remove the drive belt (1) while pulling the drive belt tensioner by a suitable tool (3).

Installation Procedure

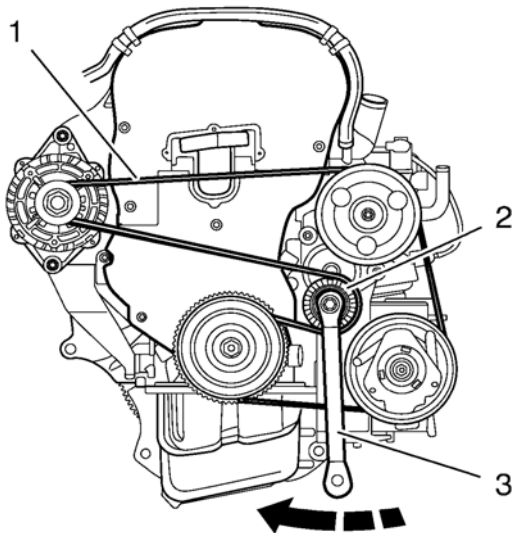

1. Rotate the drive belt tensioner bolt (2) clockwise.
2. Install the drive belt (1) while pulling the tensioner by a suitable tool (3).
3. Rotate the tensioner counterclockwise to tension the belt drive belt (2)
4. Install the front compartment splash shield. Refer to [Front Compartment Splash Shield Replacement](#).
5. Lower the vehicle full height. Refer to [Lifting and Jacking the Vehicle](#).