


Inside Rearview Mirror Replacement

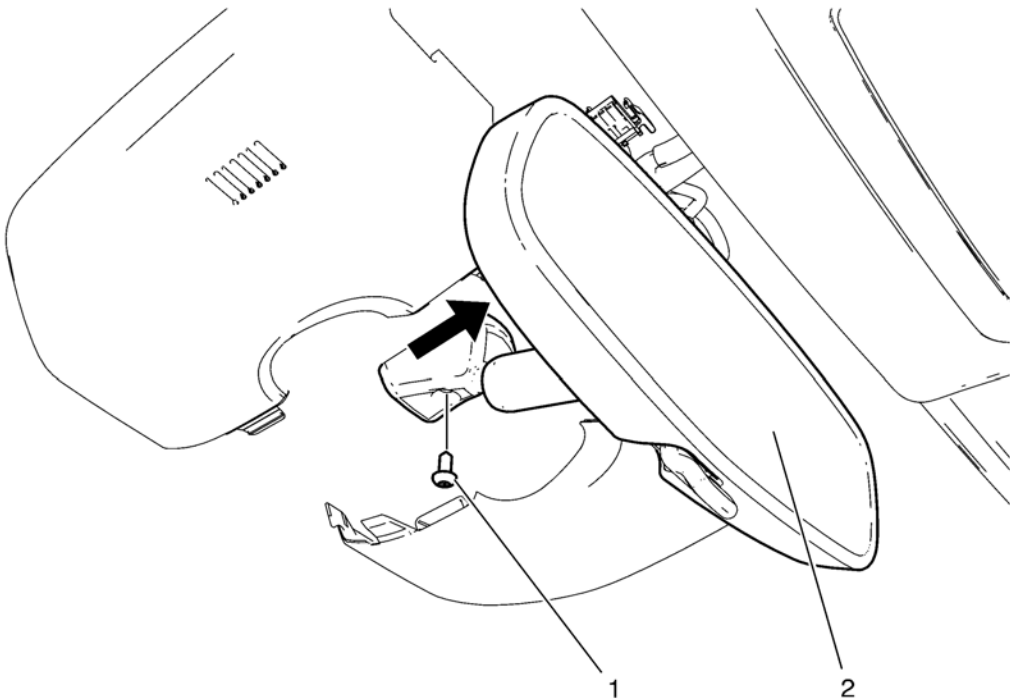

Callout	Component Name
Preliminary Procedure 1. Remove the outside moisture cover. Refer to Windshield Outside Moisture Sensor Cover Replacement 2. Adjust the mirror to the full upward position.	
1	Inside Rearview Mirror Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 8 N·m (80 lb in)
2	Inside Rearview Mirror Tip Slide the mirror in an upward motion in order to remove.