


Steering Wheel Inflatable Restraint Module Coil Replacement

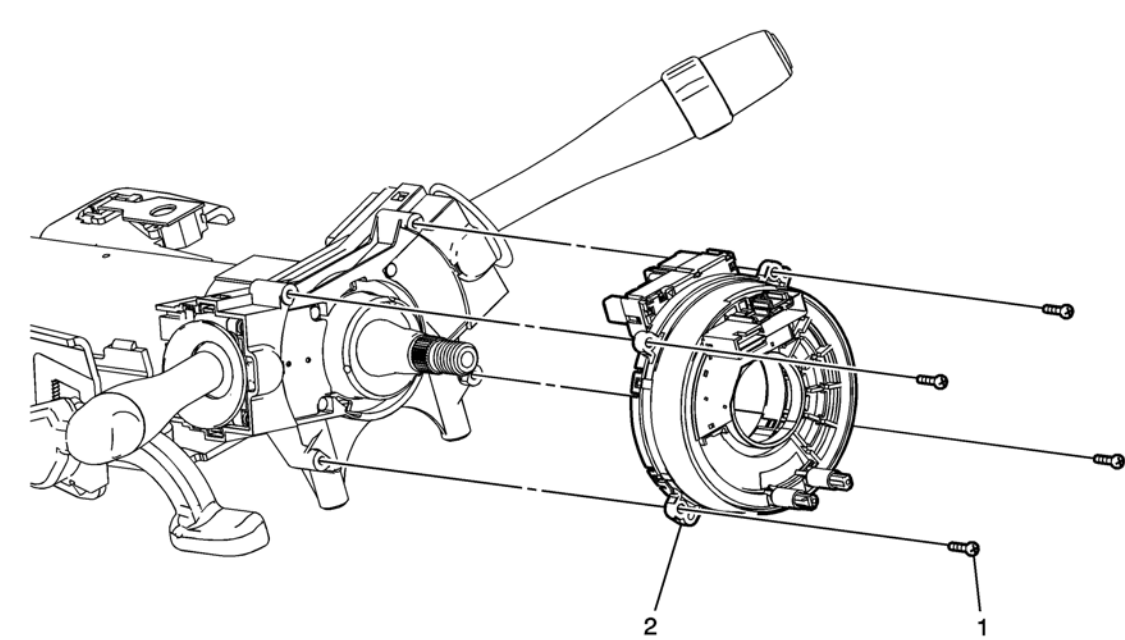

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the steering column upper trim cover. Refer to Steering Column Upper Trim Cover Replacement.</p> <p>2. Remove the steering column lower trim cover. Refer to Steering Column Lower Trim Cover Replacement.</p> <p>3. Remove the steering wheel. Refer to Steering Wheel Replacement.</p>	
1	<p>Steering Wheel Inflatable Restraint Module Coil Screw Bolt (Qty: 4)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 15 N·m (11 lb ft)</p>
2	<p>Steering Wheel Inflatable Restraint Module Coil Assembly</p> <p>Procedure</p> <p>Disconnect any electrical connectors as needed.</p> <p>Tip</p> <ul style="list-style-type: none">Do not remove the centering tab from a new steering wheel inflatable restraint module coil until it has been installed or re-centering will be required.If re-centering of the steering wheel inflatable restraint module coil is needed then refer to Inflatable Restraint Steering Wheel Module Coil Centering.