



9. Install and tighten 4 fasteners (1) of engine side cover on both sides.

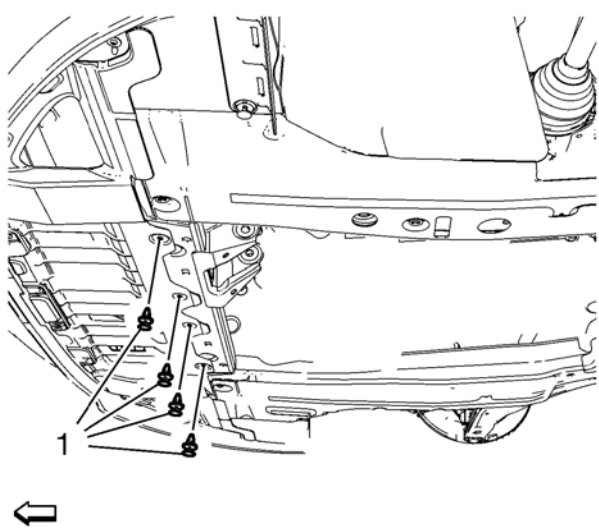

10. Install and tighten the 4 fasteners (1) of front engine compartment cover.
11. Install the front compartment insulator, if equipped [Front Compartment Insulator Replacement](#).
12. Install the exhaust flexible pipe. Refer to [Exhaust Flexible Pipe Replacement](#).

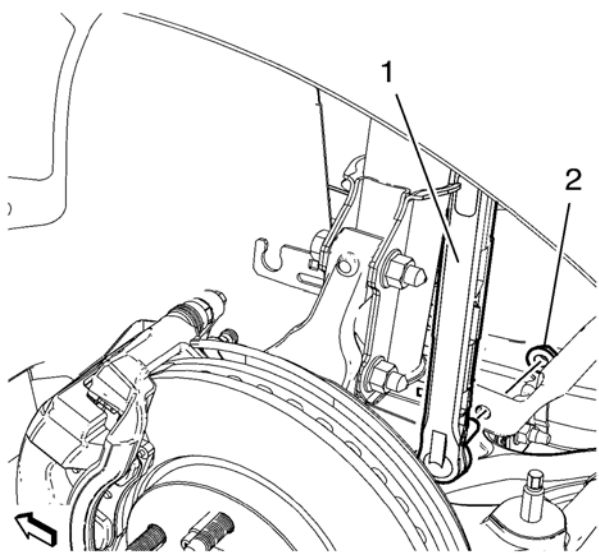

13. Install and tighten lower stabilizer link shaft nut (2) on both sides to **35 N·m (26 lb ft)**.
14. Lower the vehicle.
15. Install the tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#).