


Drivetrain and Front Suspension Frame Replacement

Special Tools


- CH 904 Underframe
- CH 49289 Centering Adapter

For equivalent regional tools, refer to [Special Tools](#).

Removal Procedure

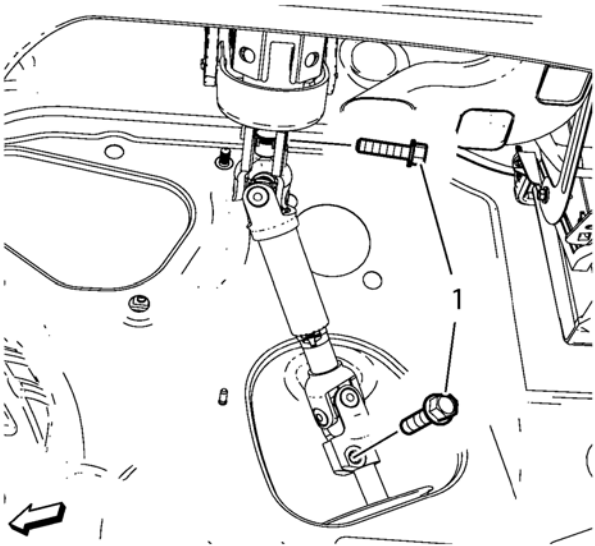

1. Support the radiator and condenser from above using the condenser tabs on each side.
2. Remove the lower steering intermediate shaft bolt (1).
3. Raise the vehicle on a hoist. Refer to [Lifting and Jacking the Vehicle](#).
4. Remove the tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#).
5. Remove the exhaust flexible pipe. Refer to [Exhaust Flexible Pipe Replacement](#).
6. Remove the front compartment splash shield. Refer to [Front Compartment Splash Shield Replacement](#).
7. Remove the front compartment insulator, if equipped. Refer to [Front Compartment Insulator Replacement](#).

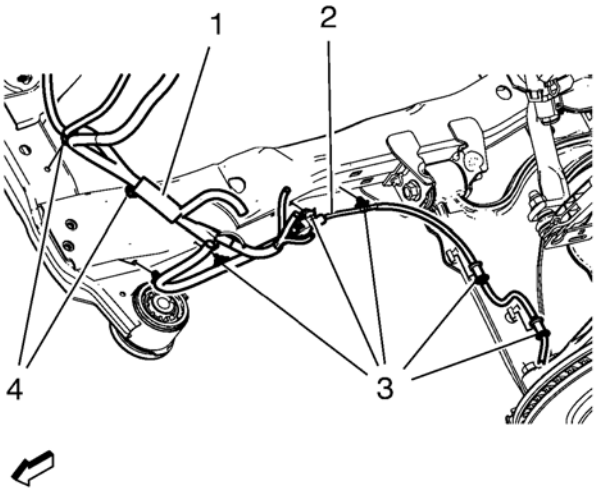

8. Remove the wheel speed sensor wiring harness (2) from the frame on both sides.
Remove the wiring harness retainers (3) from the frame and the lower control arm.
9. Remove the radiator wiring harness (1) from the frame.
Remove the wiring harness retainers (4) from the frame.

