



- 6. Install the front transmission mount bolt (1) and tighten to **58 N·m (43 lb ft)**.
- 7. Install the rear transmission mount bracket bolt (2) and tighten to **100 N·m (74 lb ft)**.

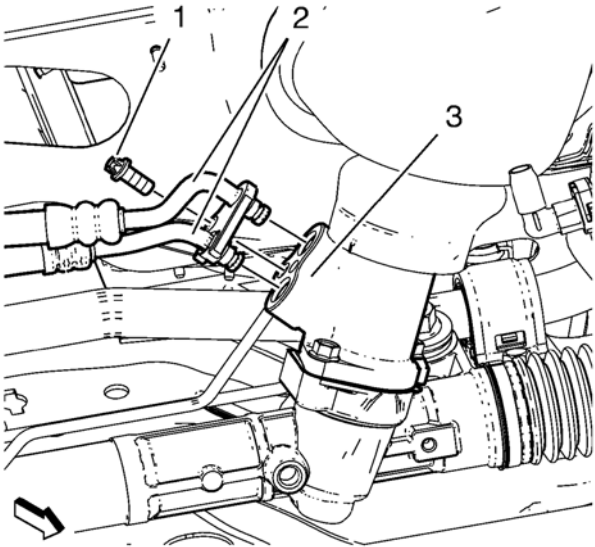

- 8. Replace the O-rings of the inlet and outlet hoses. Lubricate O-rings with a small amount of hydraulic oil.
- 9. Install the inlet and outlet hose (2) to the steering gear (3) and install the power steering gear inlet and outlet hose bolt (1). Tighten the power steering inlet and outlet hose bolt to **11 N·m (98 lb in)**.
- 10. Install the stabilizer shaft link to the strut.

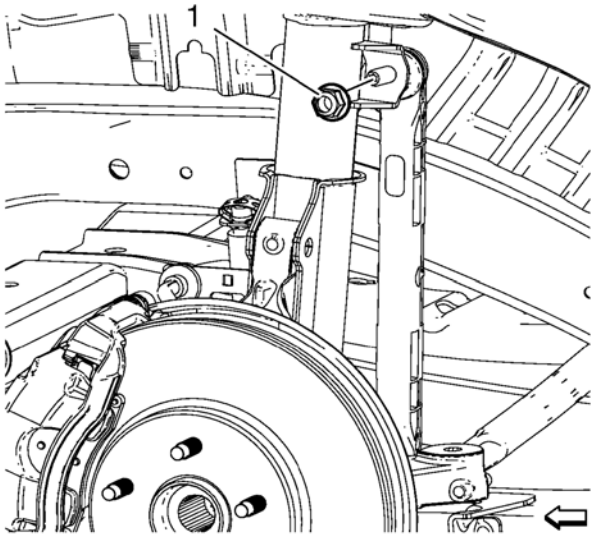

- 11. Install the NEW stabilizer shaft link nut (1) and tighten to **65 N·m (48 lb ft)**.
- 12. Install the steering linkage inner tie rod. Refer to [Steering Linkage Inner Tie Rod Replacement](#).
- 13. Install the front compartment insulator, if equipped. Refer to [Front Compartment Insulator Replacement](#).
- 14. Install the front compartment splash shield. Refer to [Front Compartment Splash Shield Replacement](#).
- 15. Install the exhaust flexible pipe. Refer to [Exhaust Flexible Pipe Replacement](#).
- 16. Install the front tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#).
- 17. Lower the vehicle.