


Backup Lamp Replacement

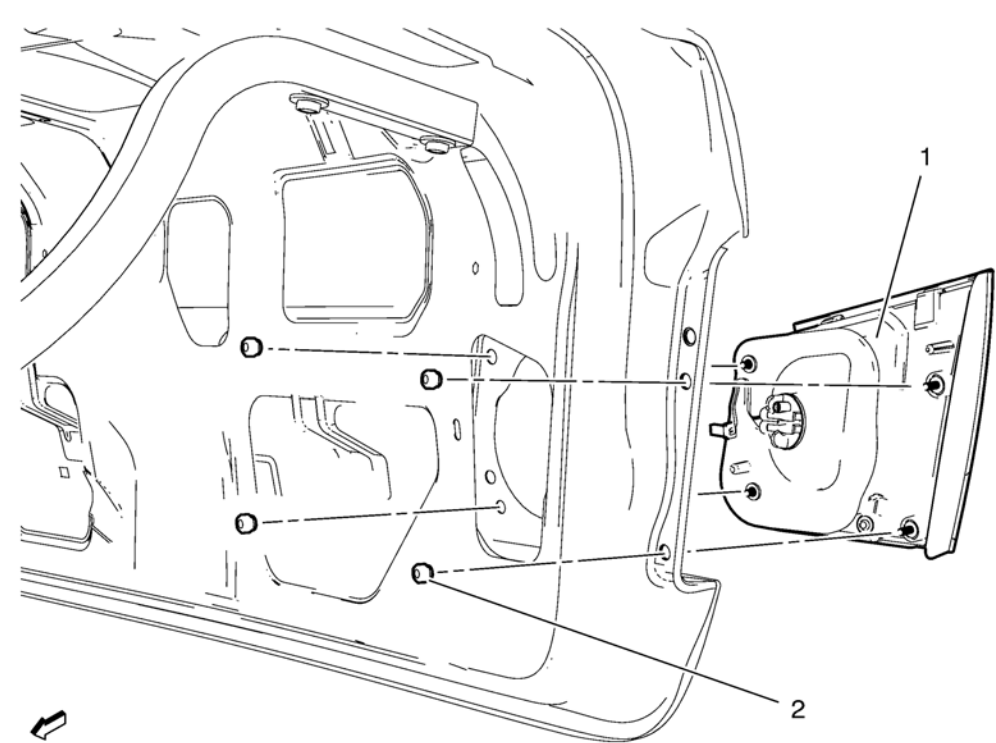

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the rear compartment sill trim plate. Refer to Rear Compartment Sill Trim Plate Replacement.</p> <p>2. Disconnect the electrical harness connector from the backup lamp socket.</p>	
1	<p>Back Up Lamp Nut (Qty: 4)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 5 N·m (44 lb ft)</p>
2	<p>Back Up Lamp Assembly</p> <p>Warning: Refer to Glass and Sheet Metal Handling Warning in the Preface section.</p> <p>Warning: Refer to Halogen Bulb Warning in the Preface section.</p> <p>Procedure</p> <p>1. Reach inside the rear compartment lid inner panel and remove the lower and upper retainer nuts securing the lamp assembly to the outer rear compartment lid panel.</p> <p>2. Push the inside edge of the lamp assembly outward from the rear outer compartment lid panel.</p> <p>3. Remove and transfer the bulb socket from the back up lamp assembly.</p>