

Strut, Strut Component, or Spring Replacement


Special Tools

- CH-6068 Spring Tensioner Device
- CH-6066 Holding Device


For equivalent regional tools, refer to [Special Tools](#).

Disassembly Procedure

1. Remove the strut assembly. Refer to [Strut Assembly Replacement](#).

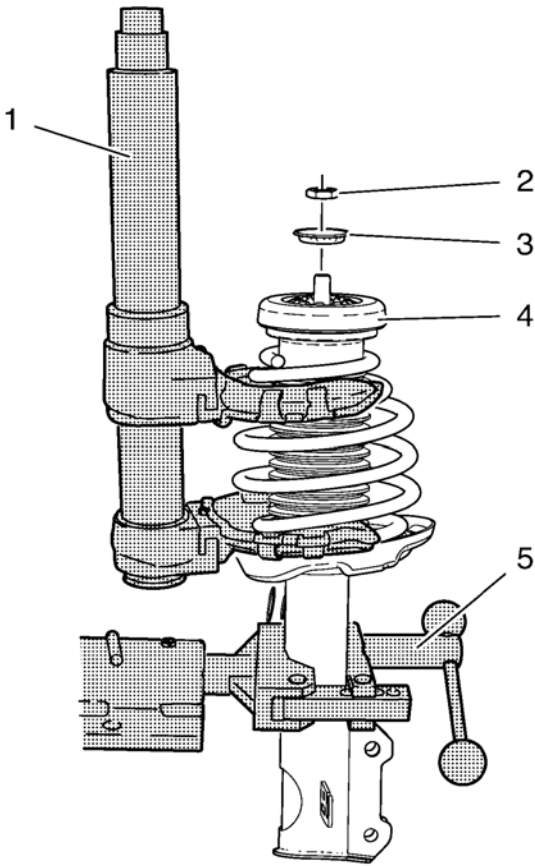

2. Install the strut to the CH-6066 holder (5).
3. Tension spring (4), using CH-6068 tensioner to remove the spring tension from the upper strut mount.
4. Remove the strut nut (2).
5. Remove the strut mount insulator washer (3).

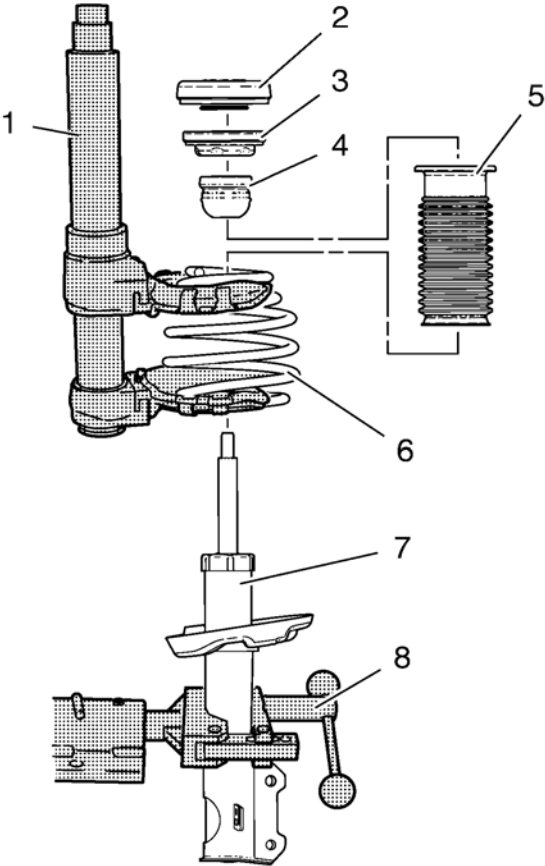

6. Remove the front spring strut components:
 - 6.1. Remove the strut mount insulator assembly (2). Inspect for damage and replace as necessary.
 - 6.2. Remove the strut mount bearing assembly (3). Inspect for damage and replace as necessary.
 - 6.3. Remove the bumper (4). Inspect for damage and replace as necessary.
 - 6.4. Remove the insulator (5). Inspect for damage and replace as necessary.
 - 6.5. Remove the spring (6) with CH-6068 tensioner (1).
 - 6.6. Remove the spring tension using the CH-6068 tensioner . Inspect for damage and replace as necessary.