


Windshield Garnish Molding Replacement

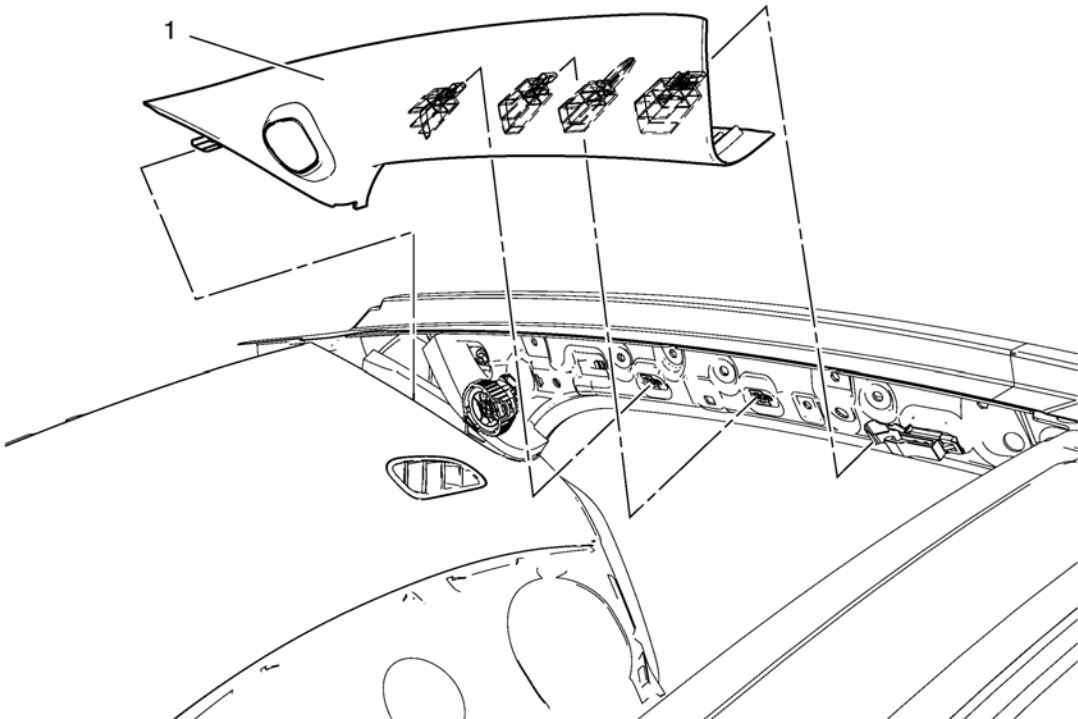

Callout	Component Name
<p>Preliminary Procedure</p> <p>Disable the SIR system. Refer to SIR Disabling and Enabling.</p>	
1	<p>Windshield Garnish Molding Assembly</p> <p>Procedure</p> <ol style="list-style-type: none">Loosen tether clip and steel clips.Disconnect electrical connector.The tether clip at the upper portion of the garnish molding MUST be replaced any time the garinish molding is removed.