


Front Side Door Outside Handle Housing Replacement

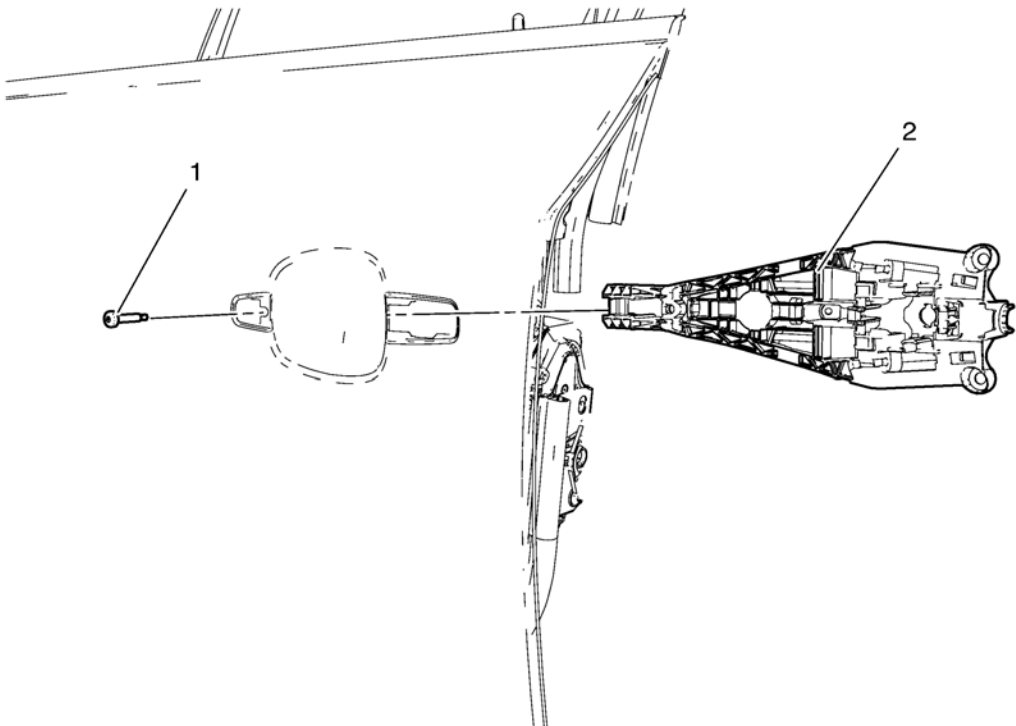

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>1. Remove the front side door trim. Refer to <a href="#">Front Side Door Trim Replacement</a>.</p> <p>2. Remove the water deflector. Refer to <a href="#">Front Side Door Water Deflector Replacement</a>.</p> <p>3. Remove the outside door handle. Refer to <a href="#">Front Side Door Outside Handle Replacement</a>.</p>	
1	<p>Front Side Door Handle Housing Bolt</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2.5 N·m (22 lb in)</p>
2	<p>Front Door Outside Handle Housing</p> <p><b>Procedure</b></p> <p>1. Disconnect the lock and handle rods to remove the housing.</p> <p>2. Transfer the lock cylinder to the new housing. Refer to <a href="#">Front Side Door Lock Cylinder Replacement</a>.</p> <p>3. Inspect the lock, lock cylinder and handle adjustments. Refer to <a href="#">Front Side Door Outside Handle Rod Adjustment</a>.</p>