

Front Brake Rotor Replacement


Special Tools

- CH-41013 Rotor Resurfacing Kit
- CH-42450-A Wheel Hub Resurfacing Kit


For equivalent regional tools, refer to [Special Tools](#).

Removal Procedure


Warning: Refer to [Brake Dust Warning](#) in the Preface section.

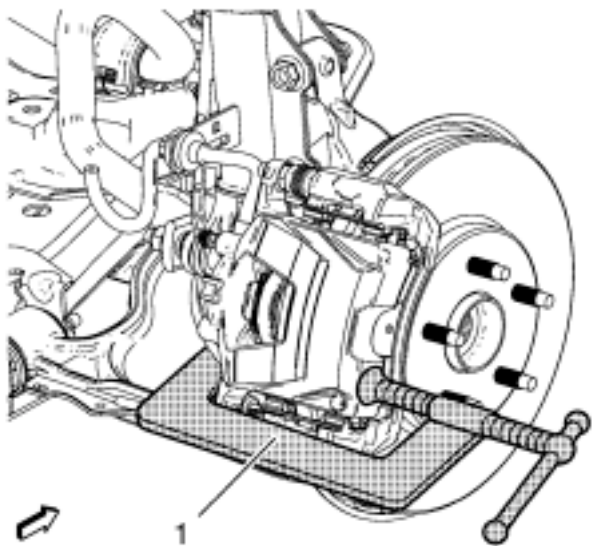

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).
2. Remove the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#).
3. Install a C-clamp (1) over the body of the brake caliper, with the C-clamp ends against the rear of the caliper body and the outboard disc brake pad.
4. Tighten the C-clamp (1) until the caliper piston is compressed into the caliper bore enough to allow the caliper to slide past the brake rotor.
5. Remove the C-clamp (1).

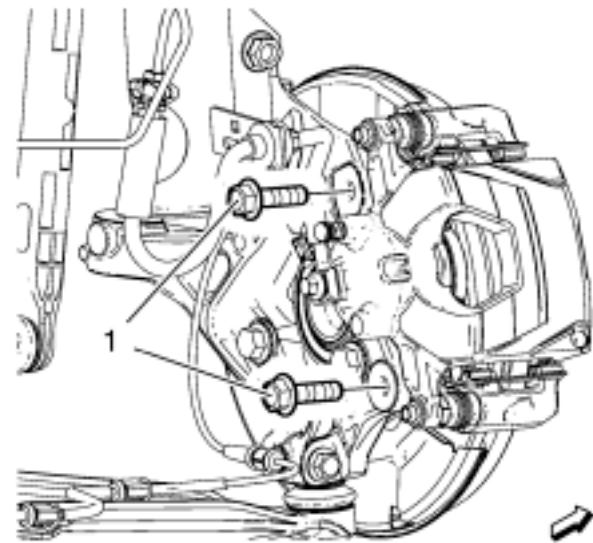

6. Remove and DISCARD the brake caliper bracket bolts (1).

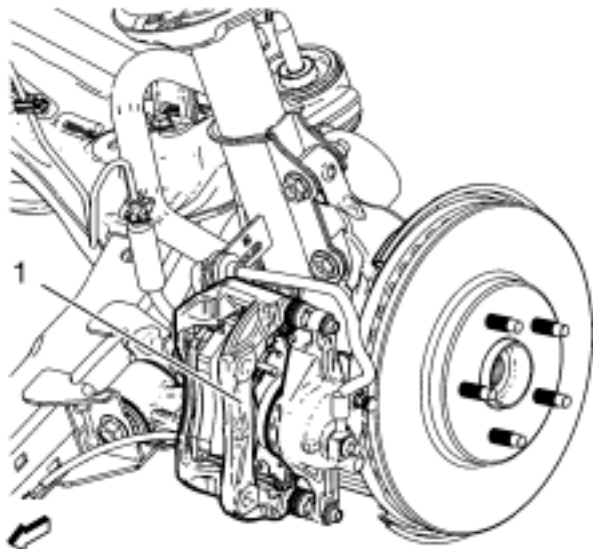

Caution: Support the brake caliper with heavy mechanic wire, or equivalent, whenever it is separated from its mount and the hydraulic flexible brake hose is still connected. Failure to support the caliper in this manner will cause the flexible brake hose to bear