


Windshield Wiper Arm Replacement

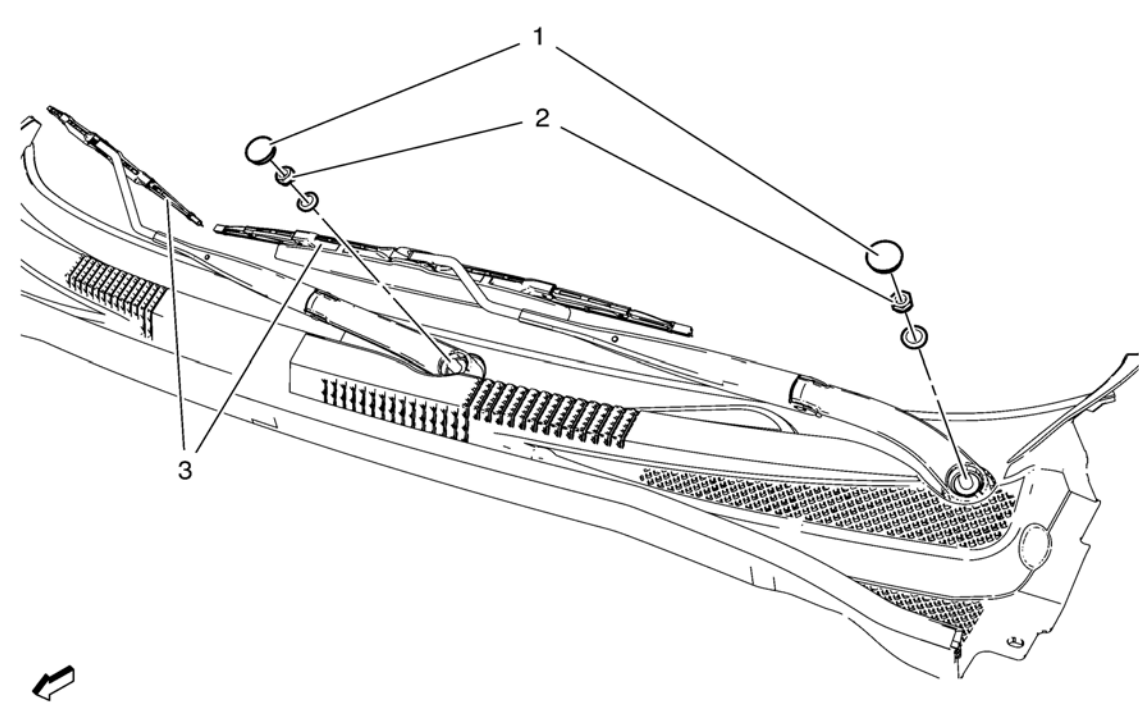

Callout	Component Name
1	<p>Windshield Washer Arm Finish Cap</p> <p>Tip Use a small flat-bladed tool to remove finish cap.</p> <p>Special Tools</p> <p>BO-6626 Wiper Arm Puller</p> <p>For equivalent regional tools, refer to Special Tools.</p>
2	<p>Windshield Washer Arm Nut</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Procedure</p> <p>1. Locate the transparent circle with a black dot in the center at the lower windshield blackout area. 2. Position the wiper arm to the pivot shaft so that the wiper blade is centered across the transparent circle. 3. Lift the arm blade portion while pushing down the arm onto the pivot shaft. 4. Install the wiper arm nut. 5. Hold the wiper arm stationary in position as previously stated. 6. Torque the wiper arm nut. 7. Release the wiper arm assembly. 8. Repeat the same procedure for the other wiper arm.</p> <p>Tighten 24.5 N·m (18 lb ft)</p>
3	<p>Windshield Washer Arm Assembly</p> <p>Tip Use the wiper arm puller if the arm fails to release from the wiper motor pivot shaft.</p>