



Windshield Washer Pump Seal Replacement

Removal Procedure

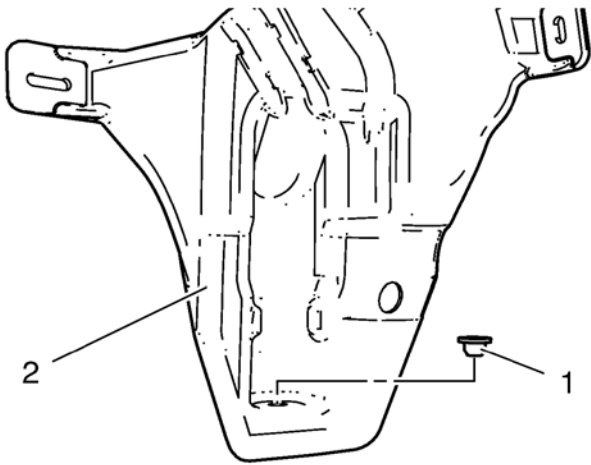

1. Open the hood.
2. Remove the windshield washer pump. Refer to [Windshield Washer Pump Replacement](#)
3. Using a small flat-bladed tool, remove the washer pump terminal seal (1) from the washer solvent container (2).

Installation Procedure

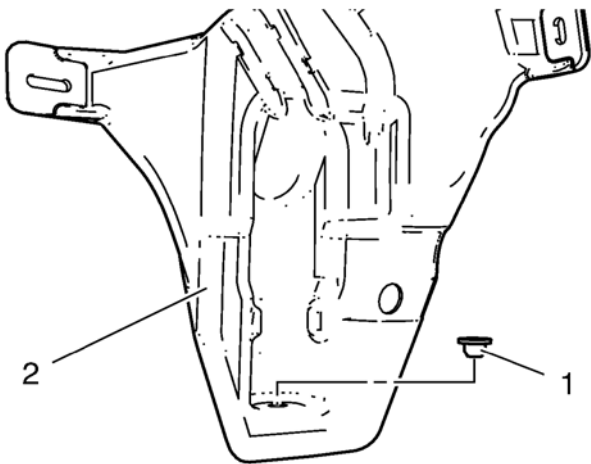

1. Position the washer pump terminal seal (1) to the washer solvent container (2), pressing in until fully seated.
2. Install the windshield washer pump. Refer to [Windshield Washer Pump Replacement](#)
3. Close the hood.