



Rear Spring Replacement

Removal Procedure

1. Raise and suitably support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).
2. Support the rear axle with a tall jack stand near the shock absorber.
3. Remove the lower shock bolt. Refer to [Shock Absorber Replacement](#).
4. Using the tall jack stands, slowly lower the rear axle in order to remove tension from the rear springs.

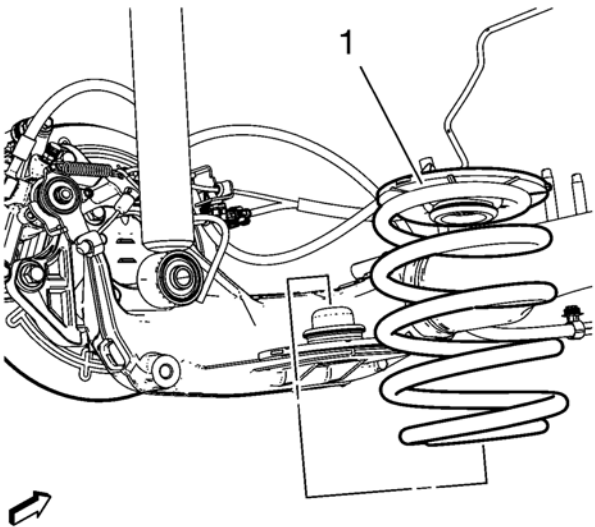


5. Remove the spring (1).

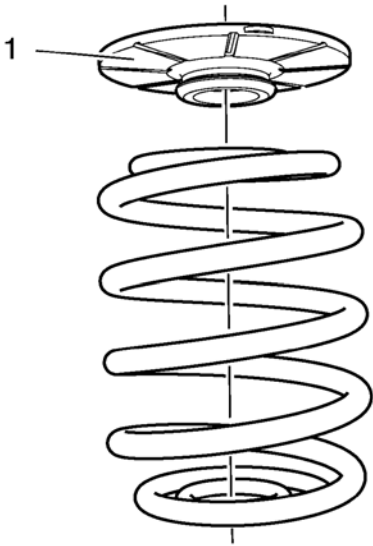

6. Remove the upper spring seat/jounce bumper (1) from the spring, while leaving the lower spring seat on the axle.

Installation Procedure

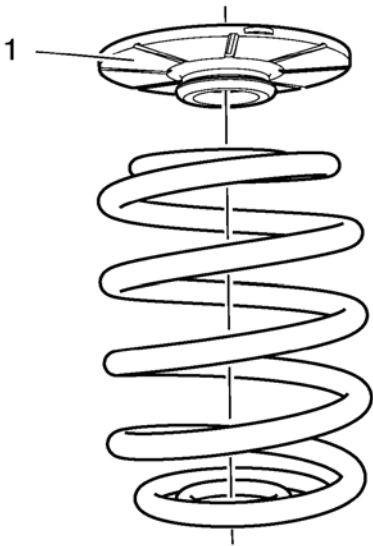

1. Install the upper spring seat/jounce bumper (1) on the spring.