


- 4. Clamp the front side door outer panel into position.
- 5. Pre-flanging the flange with *BO-6396* pliers and *BO-6392* tool kit .

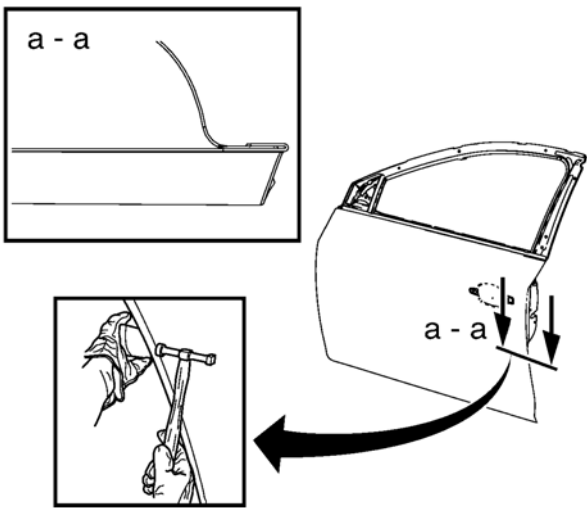

- 6. Continue to hammer in stages along the hem flanges.
- 7. Apply the sealers and anti-corrosion materials to the repair area, as necessary. Refer to [Anti-Corrosion Treatment and Repair](#).
- 8. Install the outside rearview mirror. Refer to [Outside Rearview Mirror Replacement](#).
- 9. Install the front side door outside handle. Refer to [Front Side Door Outside Handle Replacement](#).
- 10. Install the front side door. Refer to [Front Side Door Replacement](#).
- 11. Paint the repaired area. Refer to [Basecoat/Clearcoat Paint Systems](#).
- 12. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
- 13. Enable the SIR system. Refer to [SIR Disabling and Enabling](#).