



Caution: Support the brake caliper with heavy mechanic wire, or equivalent, whenever it is separated from its mount and the hydraulic flexible brake hose is still connected. Failure to support the caliper in this manner will cause the flexible brake hose to bear the weight of the caliper, which may cause damage to the brake hose and in turn may cause a brake fluid leak.

- 5. Using the *CH-49400* remover (2), separate the brake rotor and wheel bearing/hub assembly (1).
- 6. Remove the outer tie rod assembly from the steering knuckle. Refer to [Steering Linkage Outer Tie Rod Replacement](#).
- 7. Remove the ball joint from the steering knuckle. Refer to [Lower Control Arm Replacement](#).

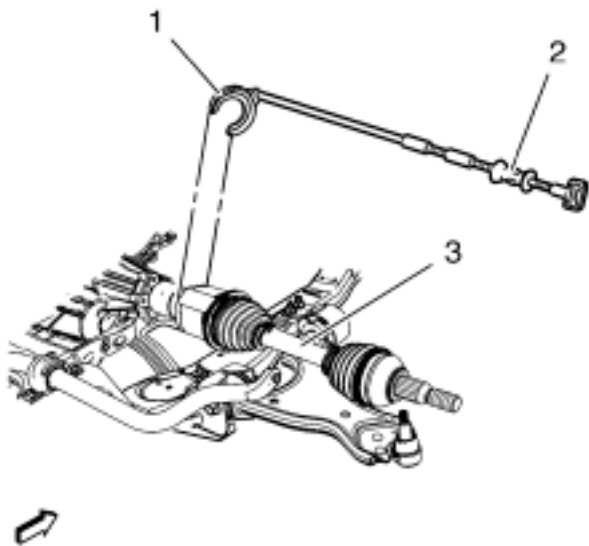

- 8. Using the *CH-313* Slide Hammer (2) with *CH-6003* Axle Shaft Remover (1) remove the wheel drive shaft (3) from the vehicle.

Installation Procedure

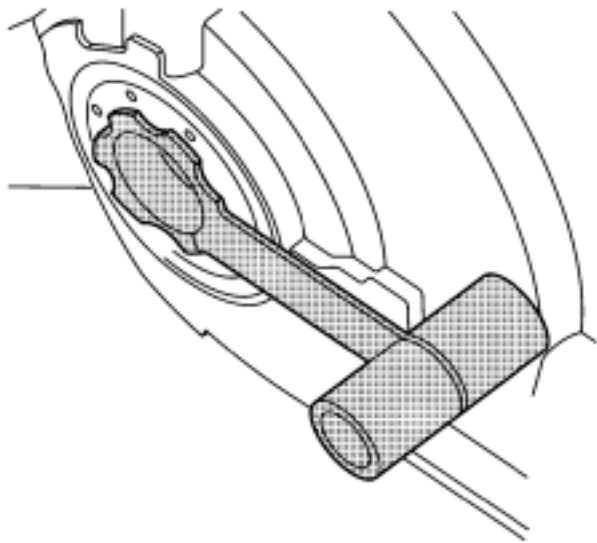

- 1. Install the *DT-6332* protector into the differential output shaft seal.