

## Drive Belt Replacement


### Special Tools

EN 6349 Locking Pin


For equivalent regional tools, refer to [Special Tools](#).

### Removal Procedure

1. Open the hood.
2. Remove the power steering pump belt. Refer to [Power Steering Pump Belt Replacement](#).
3. Raise the vehicle by its full height. Refer to [Lifting and Jacking the Vehicle](#).
4. Remove the front compartment splash shield. Refer to [Front Compartment Splash Shield Replacement](#).

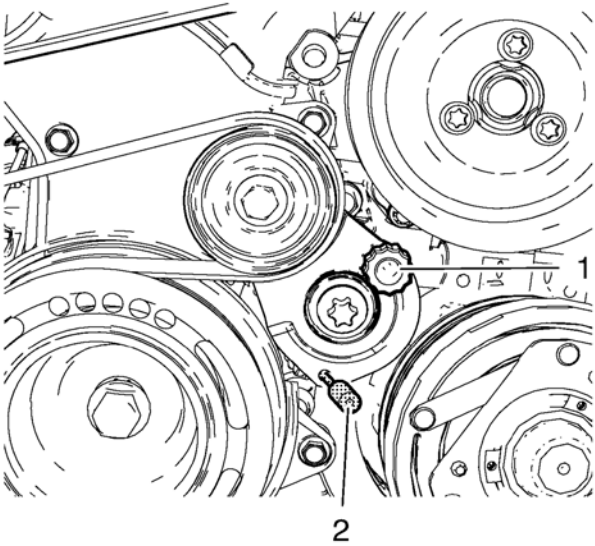


5. Release tension to the drive belt tensioner counterclockwise (1) and lock with *EN 6349* pin (2).

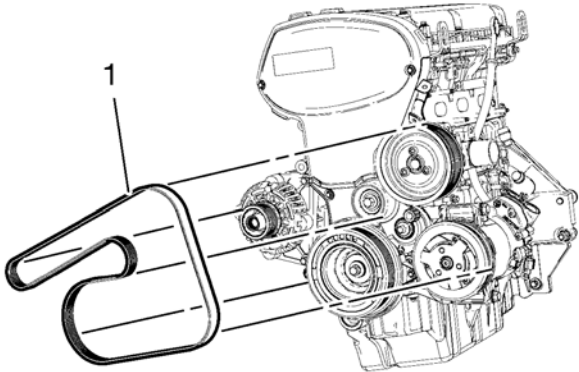

6. Remove the drive belt (1).

### Installation Procedure

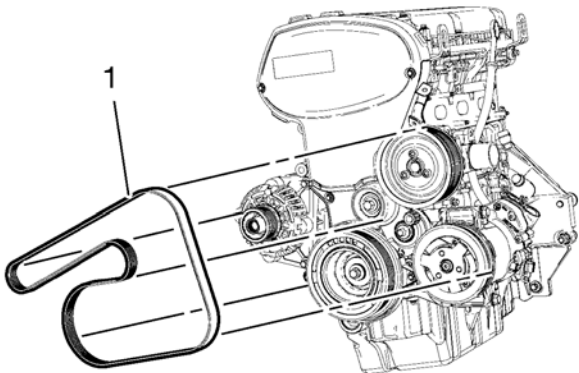

1. Install the drive belt (1).