


Outside Rearview Mirror Housing Replacement

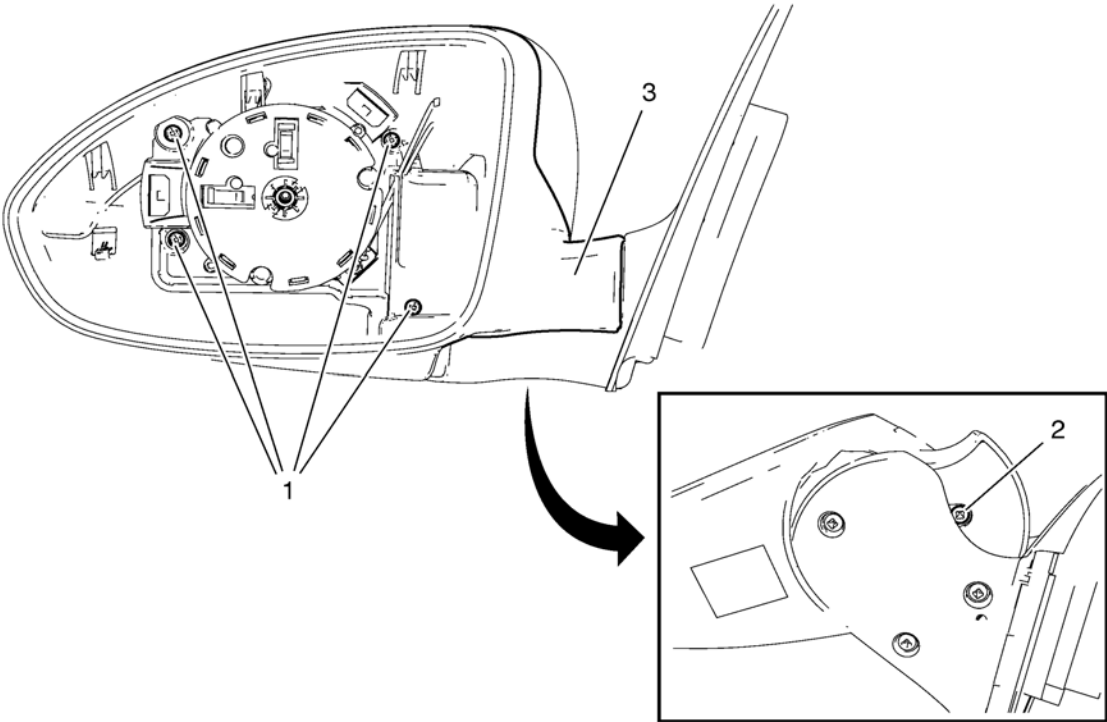

Callout	Component Name
Preliminary Procedure Remove outside rearview mirror glass. Refer to Outside Rearview Mirror Glass Replacement .	
1	Outside Rearview Mirror Housing Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Lower Outside Rearview Mirror Housing Screw Tighten 2.5 N·m (22 lb in)
3	Outside Rearview Mirror Housing Tip Disconnect electrical connector.