


## Front Fog Lamp Bezel Replacement

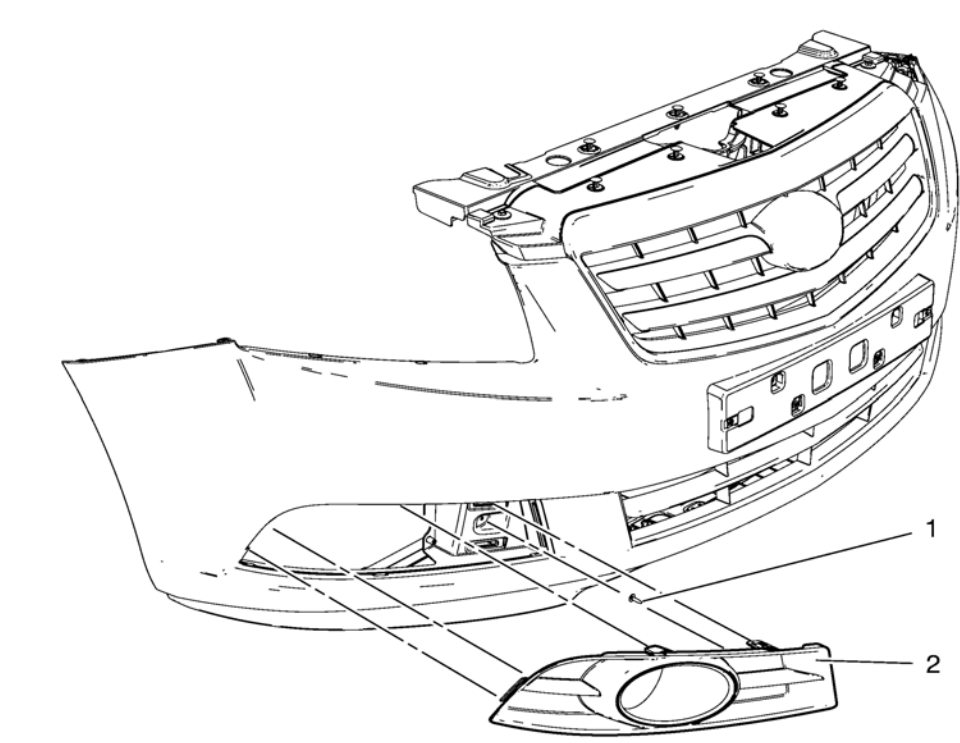

Callout	Component Name
<b>Preliminary Procedure</b>  1. Remove front bumper fascia. Refer to <a href="#">Front Bumper Fascia Replacement</a> . 2. Remove front fog lamp. Refer to <a href="#">Front Fog Lamp Replacement</a> .	
1	Front Fog Lamp Bezel Screw  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.  <b>Tighten</b> 2.5 N·m (23 lb in)
2	Front Fog Lamp Bezel  <b>Procedure</b>  1. Disengage the four inner retainer tabs securing the bezel to the front bumper fascia. 2. Pull outward from the outer edge in order to release the outer retention clips securing the bezel to the front bumper fascia. 3. Remove the front fog lamp bezel.