


Windshield Washer Nozzle Replacement

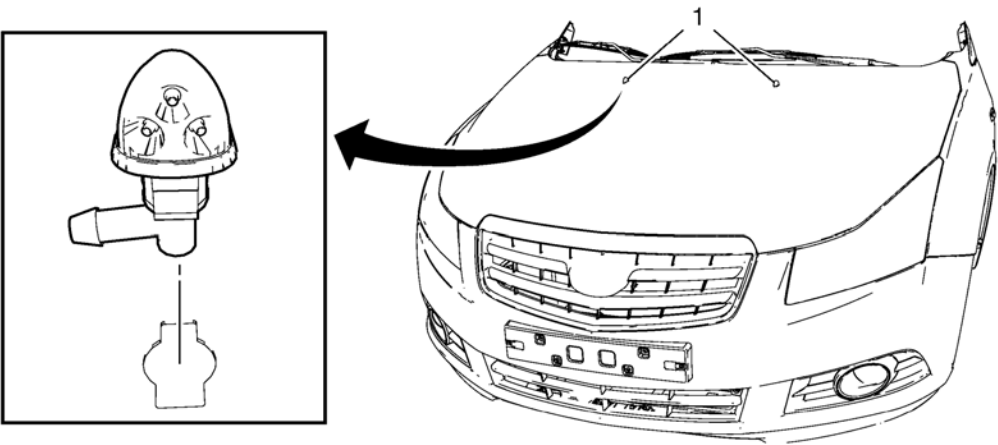

Callout	Component Name
<p>Preliminary Procedure</p> <ol style="list-style-type: none">1. Disconnect the washer hose from the washer nozzles.2. Remove the hood insulator. Refer to Hood Insulator Replacement	
1	<p>Windshield Washer Nozzle Assembly</p> <p>Tip Pinch the washer nozzle from the bottom side in order to release the nozzle and push the nozzle outboard from the hood to remove.</p>