


Front Seat Head Restraint Guide Replacement

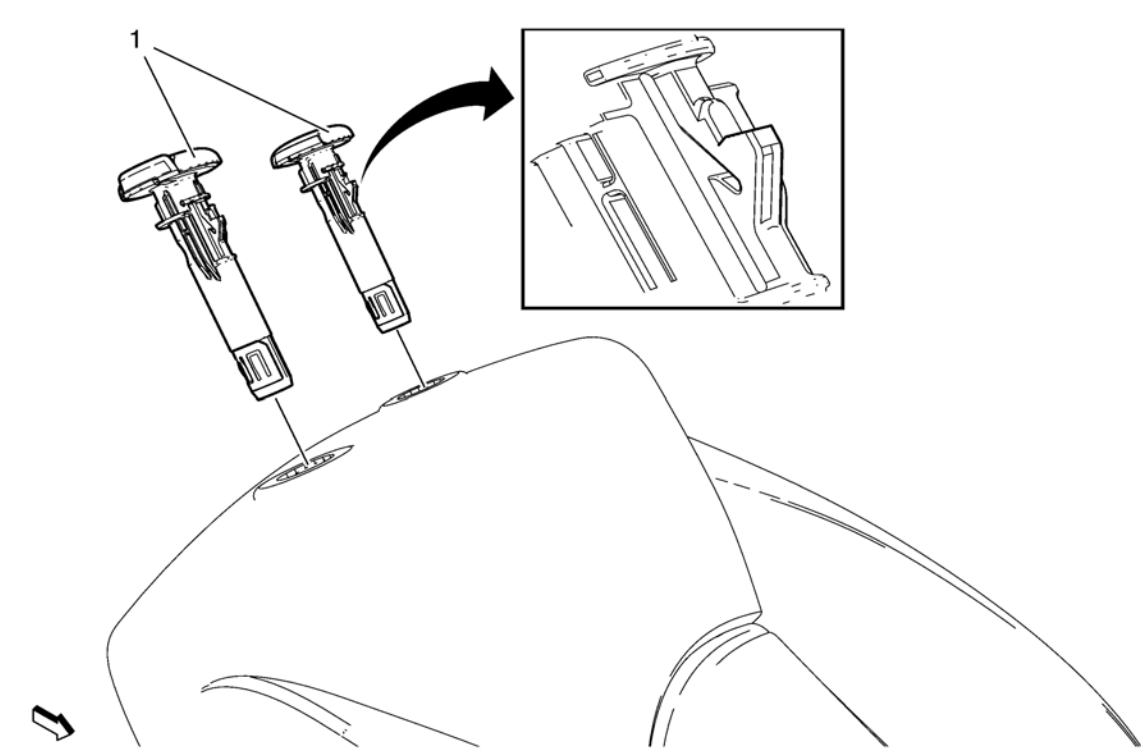

Callout	Component Name
Preliminary Procedure Remove front seat head restraint. Refer to Driver or Passenger Seat Head Restraint Replacement .	
1	Front Seat Head Restraint Guide Procedure Use a flat-bladed tool to release guide for removal.