


Front Lower Control Arm Bushing Replacement

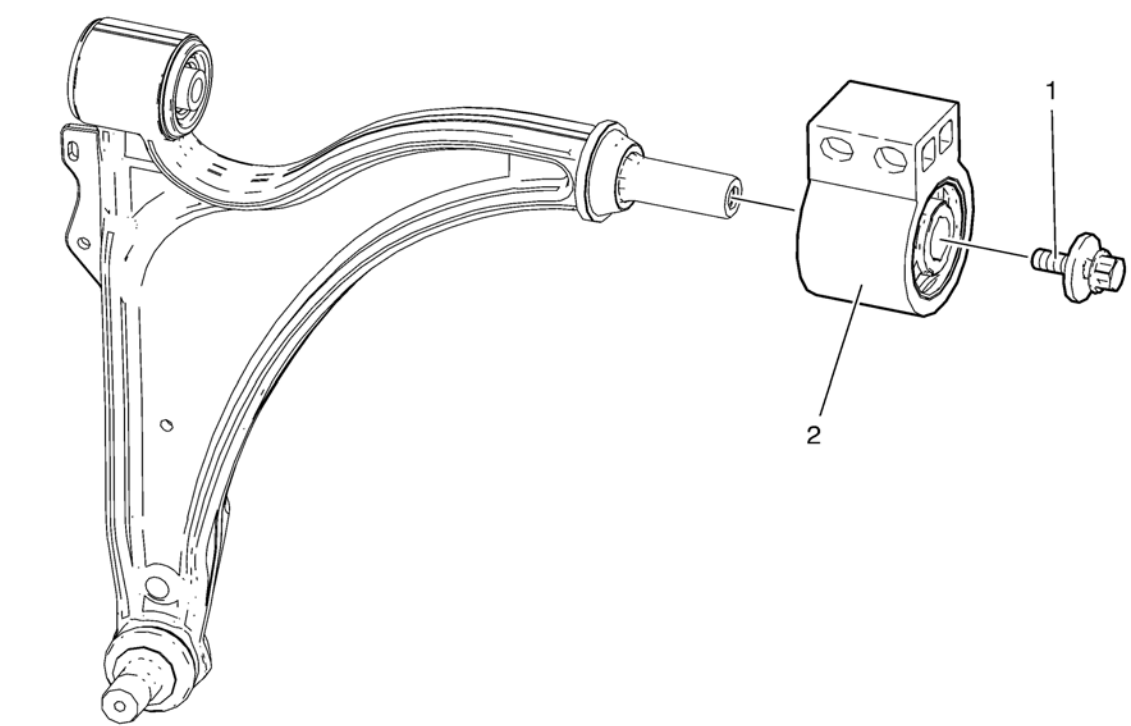

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Raise and support the vehicle. Refer to Lifting and Jacking the Vehicle.</p> <p>2. Remove the tire and wheel. Refer to Tire and Wheel Removal and Installation.</p> <p>3. Remove the lower control arm. Refer to Lower Control Arm Replacement.</p>	
1	Lower Control Arm Rear Bushing Bolt
2	<p>Lower Control Arm Rear Bushing</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Procedure</p> <p>1. Discard Bushing Bolt and use NEW ONLY.</p> <p>2. Tighten Bushing Bolt with vehicle standing on the ground.</p> <p>Tighten</p> <p>55 N·m (41 lb ft) +45-60 degrees</p> <p>Special Tools</p> <p>EN-45059 Torque Angle Sensor Kit . Refer to Special Tools.</p>