


Power Steering Pump Bracket Replacement

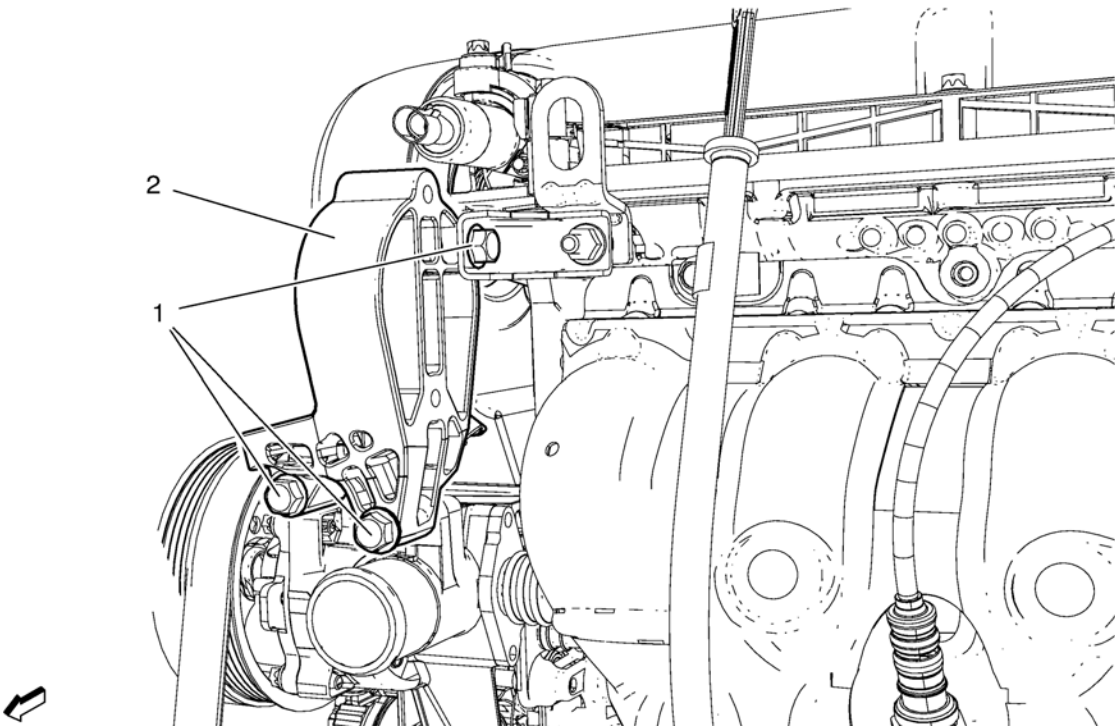

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the power steering pump. Refer to Power Steering Pump Replacement.</p>	
1	<p>Power Steering Pump Bracket Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 22 N·m (16 lb ft)</p>
2	<p>Power Steering Pump Bracket</p>