


Hood Replacement

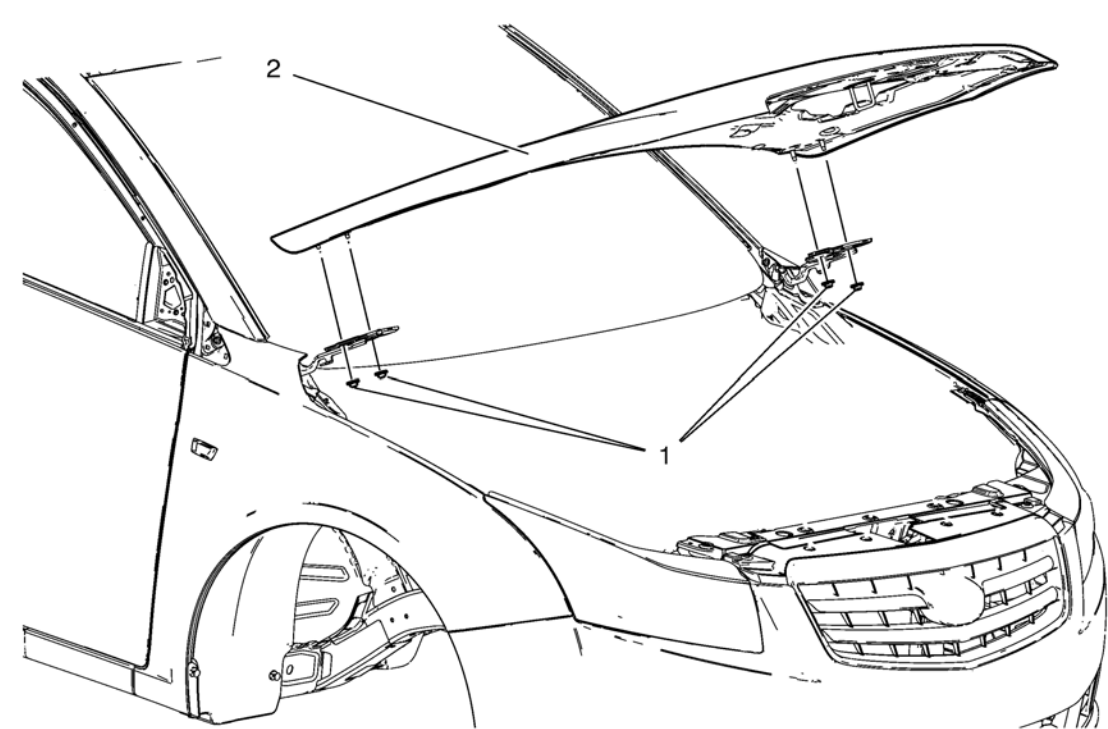

Callout	Component Name
<p>Warning: When a hood hold open device is being removed or installed, provide alternate support to avoid the possibility of damage to the vehicle or personal injury.</p> <p>Preliminary Procedure</p> <p>Remove the windshield washer nozzle hose. Refer to Windshield Washer Nozzle Hose Replacement.</p>	
1	<p>Hood Hinge Reinforcement Nut (Qty: 4)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 26 N·m (19 lb ft)</p>
2	<p>Hood</p> <p>Procedure</p> <p>1. Transfer components as necessary. 2. Adjust hood as needed. Refer to Hood Adjustment.</p>