


Battery Negative Cable Disconnection and Connection

Removal Procedure


1. Turn on the radio and record all of the customer radio station presets.
2. Ensure that all lamps and accessories are turned off.
3. Turn the ignition OFF and remove the ignition key.

Warning: Refer to [Battery Disconnect Warning](#) in the Preface section.

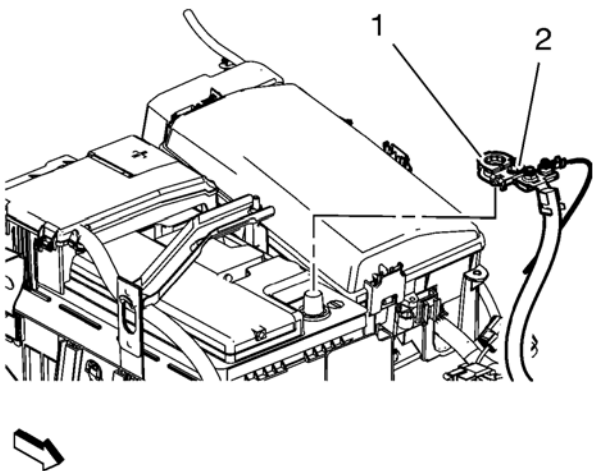

4. Loosen the negative battery cable nut (2).
5. Remove the negative battery cable (1) from the battery.

Installation Procedure

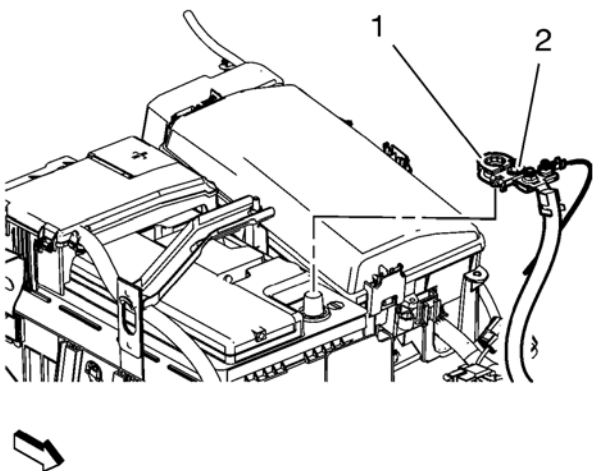

1. Install the negative battery cable (1) to the battery.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Fasten the negative battery cable nut (2) and tighten the nut to **4 N·m (35 lb in)**.
3. Insert the ignition key and turn the ignition to the ON position.
4. Program volatile memory. Refer to [Volatile Memory Programming](#).
5. Program all of the customer's radio station presets and set the radio clock to the current time.