


**Note:** The recess (2) of the fine tothing in the universal joint have to align precisely with the recess (1) of the fine tothing on the steering pinion. The bore in the universal joint have to align with the groove on the steering pinion (3).

18. Check alignment of fine tothing of universal joint and steering pinion.

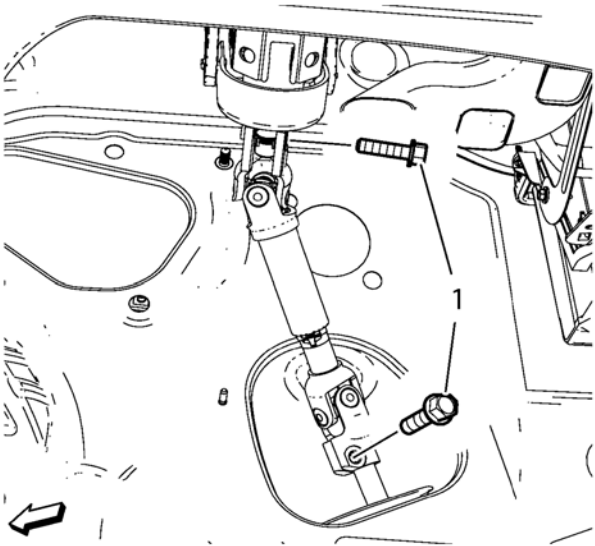

- 19. Install the lower intermediate steering shaft bolts and tighten to **34 N·m (26 lb ft)**.
- 20. Adjust the front toe. Refer to [Wheel Alignment - Steering Wheel Angle and/or Front Toe Adjustment](#).
- 21. Bleed the hydraulic steering system. Refer to [Power Steering System Bleeding](#).