



- 1. Install a new clamp (2) loosely on the inner part of the steering gear boot.
- 2. Apply grease from the service kit to the indicated locations.

Note: The steering gear boot must seat in the appropriate groove on the steering gear.

- 3. Install the steering gear boot (1) over the steering linkage inner tie rod and onto the steering gear.

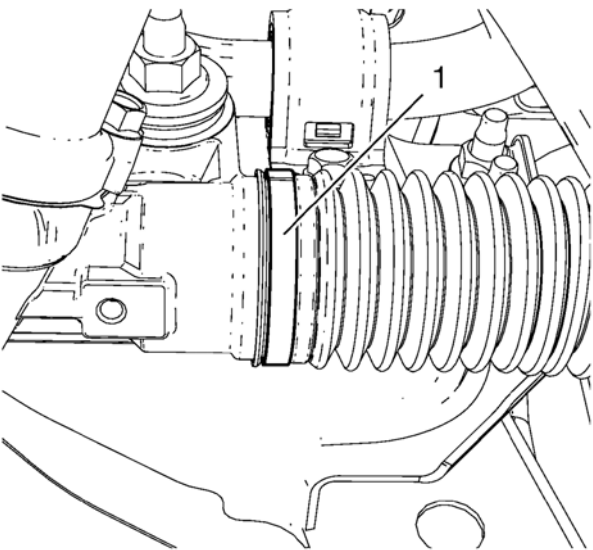

- 4. Adjust boot clamp (1) to marking on steering gear to keep correct installation position.
- 5. Using CH-804 pliers crimp the inner steering gear boot clamp (1).

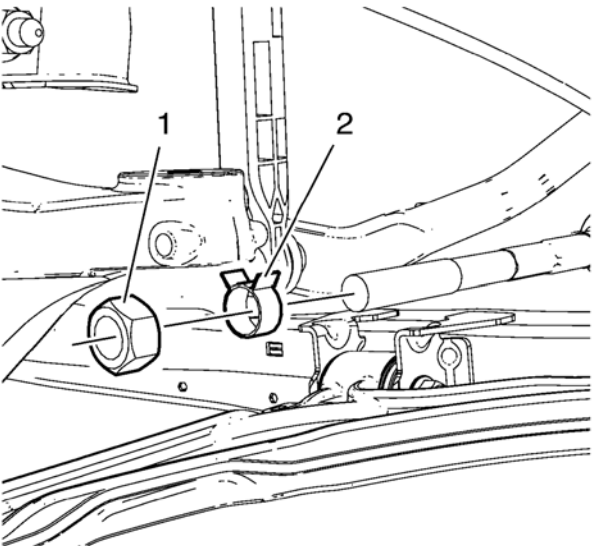

- 6. Install the steering gear outer boot clamp (2).
- 7. Install the steering linkage inner tie rod nut (1).
- 8. Install the steering linkage outer tie rod. Refer to [Steering Linkage Outer Tie Rod Replacement](#).