



## Air Conditioning Compressor and Condenser Hose Replacement (1.6L LXT)

### Removal Procedure


1. Recover the refrigerant. Refer to [Refrigerant Recovery and Recharging](#).
2. Remove front bumper fascia. Refer to [Front Bumper Fascia Replacement](#).

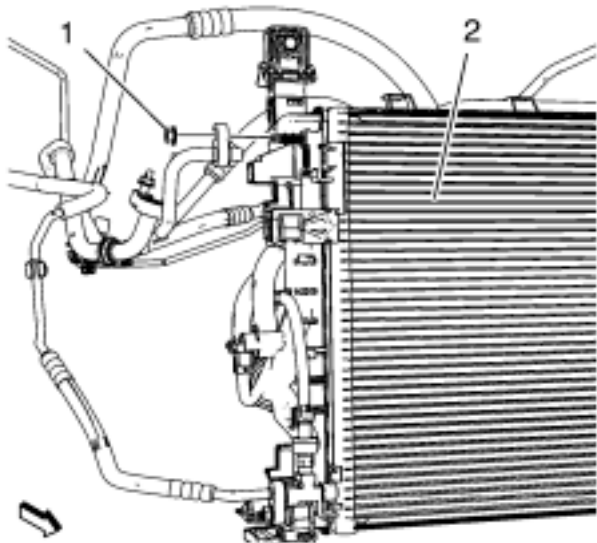

3. Remove A/C compressor and condenser hose nut (1) from A/C condensor (2).

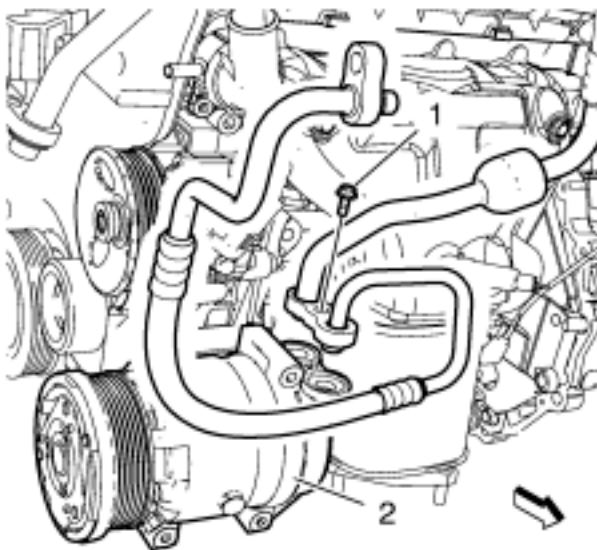

4. Remove A/C compressor and condenser hose bolt (1) from A/C compressor (2).

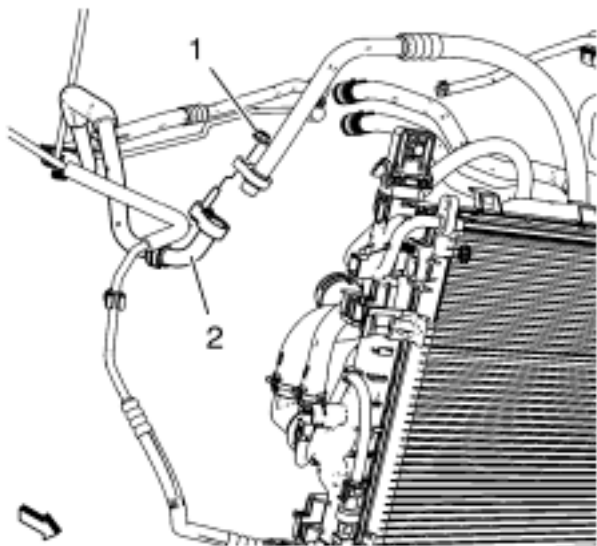

5. Remove A/C compressor and condenser hose nut (1) from refrigerant hose (2).
6. Remove A/C compressor and condenser hose.

### Installation Procedure

**Note:** Use NEW O-ring seals. Refer to [O-Ring Replacement](#).

1. Install A/C compressor and condenser hose.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.