


Windshield Washer Nozzle Hose Replacement

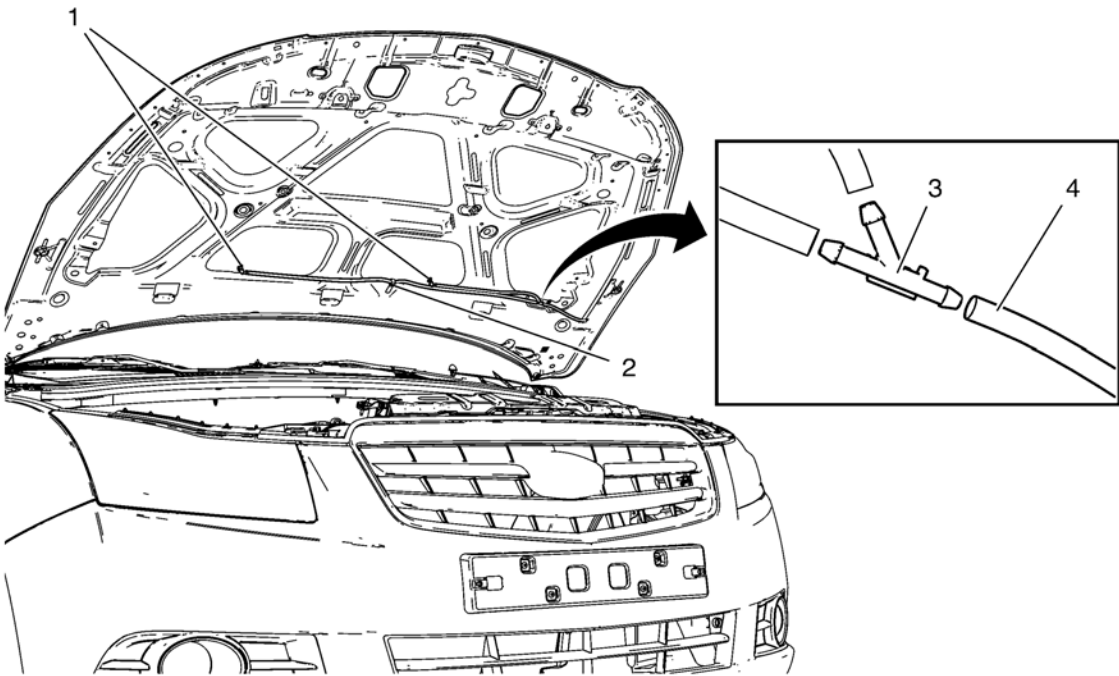

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the hood insulator. Refer to Hood Insulator Replacement.</p> <p>2. Place a clean container under the front driver side near where the windshield washer nozzle and windshield washer pump hose will be disconnected.</p> <p>3. Recover all lost windshield washer solvent.</p>	
1	Windshield Washer Nozzle Hose Tip Disconnect the washer hose from both hood mounted washer nozzles.
2	Windshield Washer Hose Retainer to Hood Hinge
3	Windshield Washer Nozzle Hose Integral Connector Tip Disconnect the hoses in order to remove the windshield washer nozzle hose.
4	Windshield Washer Pump Hose