


Note: When the seat belt pretensioner deploys, the deployment fixture may jump about 30 cm (1 ft) vertically. This is a normal reaction of the seat belt pretensioner due to the force of the rapid expansion of gas inside the pretensioner.

- 16. Place a 12V minimum/2A minimum power source (i.e., vehicle battery) near the shorted end of the harness.
- 17. Connect the SIR deployment harness wires to the power source. Pretensioner deployment will occur when contact is made.
- 18. Disconnect the SIR deployment harness from the power source after the pretensioner deploys.

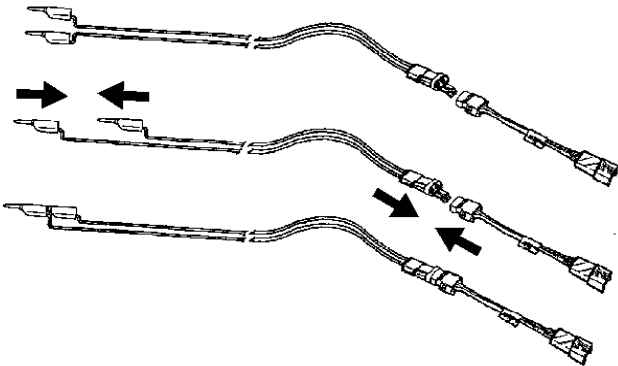

- 19. Seat one banana plug into the other in order to short the deployment harness leads.
- 20. If the pretensioner did not deploy, disconnect the adapter and discontinue the procedure. Contact the Technical Assistance Group. Otherwise, proceed to the following steps.
- 21. Put on a pair of shop gloves.
- 22. Disconnect the pigtail adapter from the pretensioner as soon as possible.
- 23. Inspect the pigtail adapter and the SIR deployment harness. Replace as needed.
- 24. Dispose of the deployed pretensioner through normal refuse channels.
- 25. Wash hands with a mild soap.