


Hood Primary and Secondary Latch Replacement

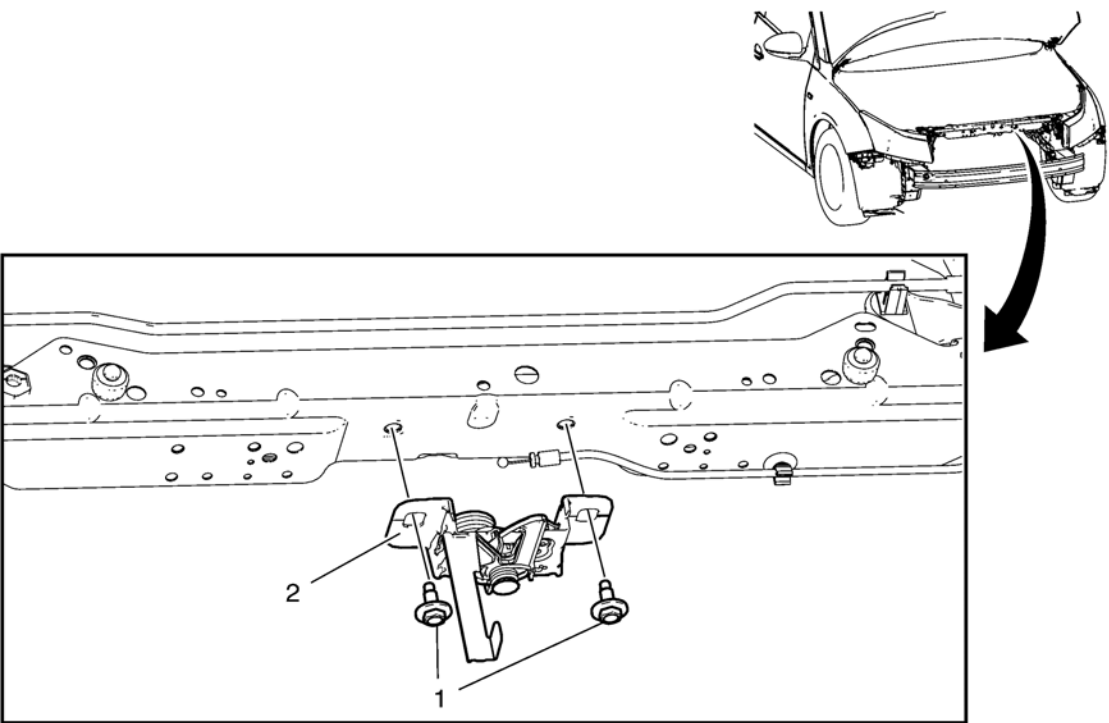

Callout	Component Name
Preliminary Procedure 1. Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement . 2. Remove the radiator grille support reinforcement. Refer to Radiator Grille Reinforcement Support Replacement .	
1	Hood Primary and Secondary Latch Retainer Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 20 N·m (15 lb ft).
2	Hood Primary and Secondary Latch Procedure 1. To release the hood primary and secondary latch unhook the hood primary latch release cable. 2. Disconnect electrical connectors as needed.