


Windshield Wiper Motor Replacement

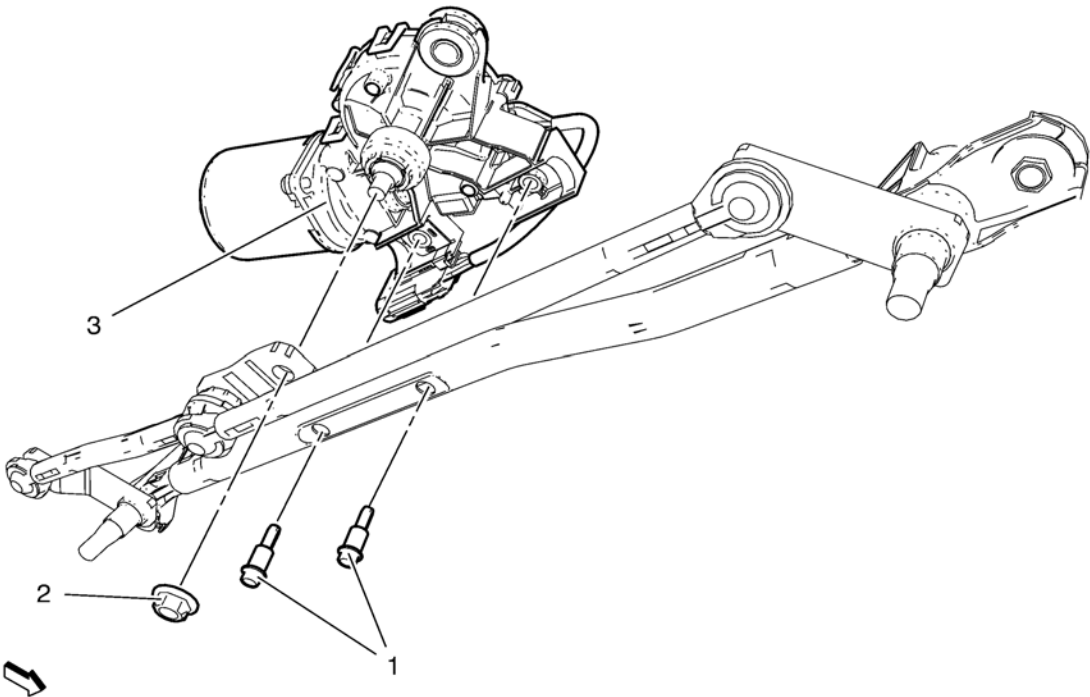

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <p>1. Remove the windshield wiper arms. Refer to <a href="#">Windshield Wiper Arm Replacement</a></p> <p>2. Remove the air inlet grille panel. Refer to <a href="#">Air Inlet Grille Panel Replacement</a>.</p> <p>3. Remove the wiper drive system module.</p>	
1	Windshield Wiper Motor Bolts (Qty: 2) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 10 N·m (89 lb in)
2	Windshield Wiper Motor Nut <b>Tighten</b> 10 N·m (89 lb in)
3	Windshield Wiper Motor Assembly