



Driver Seat Frame Replacement


Removal Procedure

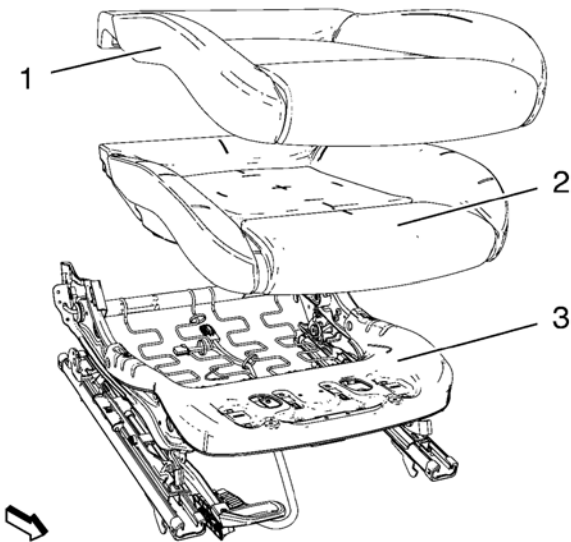

1. Remove front seat cushion cover (1) and pad (2) from frame (3). Refer to [Front Seat Cushion Cover and Pad Replacement](#)

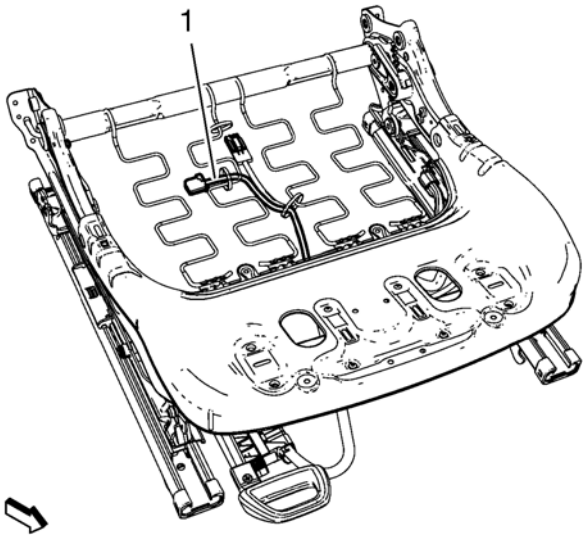

2. Remove the wire harness (1), if equipped.

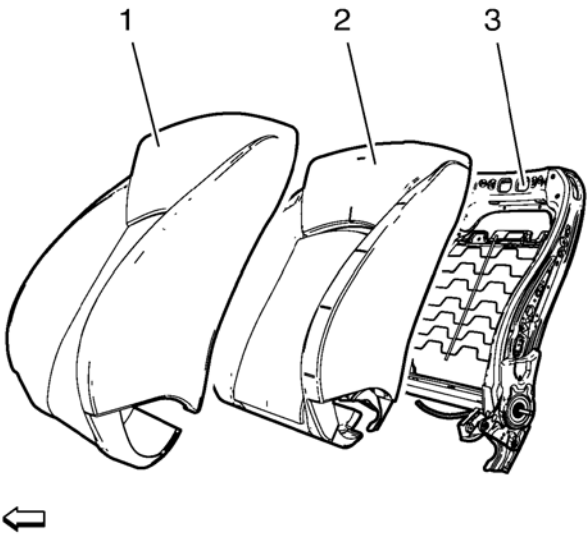

3. Remove front seat back cushion cover (1) and pad (2) from frame (3). Refer to [Driver or Passenger Seat Back Cushion Cover and Pad Replacement](#)