



Air Conditioning Condenser Replacement (1.6L LDE, LXT, LXV, and 1.8L 2H0)

Removal Procedure


1. Recover the refrigerant. Refer to [Refrigerant Recovery and Recharging](#).
2. Disconnect battery negative cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
3. Remove front bumper fascia. Refer to [Front Bumper Fascia Replacement](#).

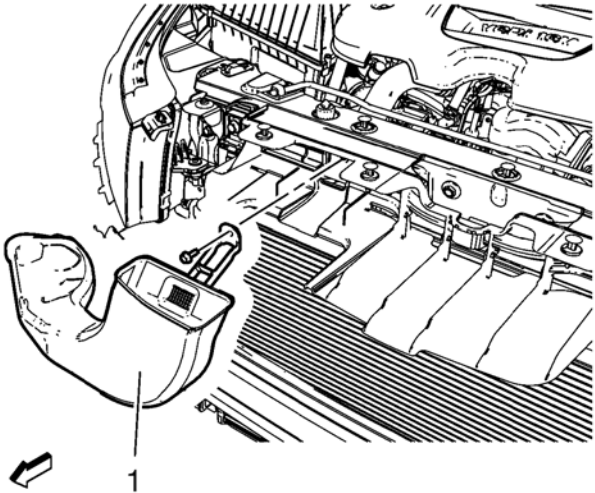

4. Remove air intake duct (1).
5. Remove radiator support replacement. Refer to [Radiator Support Replacement](#).
6. Remove A/C compressor and condenser hose from condenser. Refer to [Air Conditioning Compressor and Condenser Hose Replacement](#).

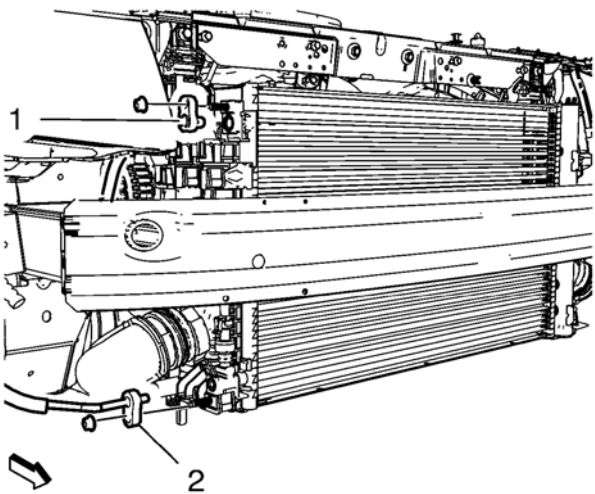

7. Remove condenser hose bolt and condenser hose (1, 2).
8. Remove A/C refrigerant pressure sensor. Refer to [Air Conditioning \(A/C\) Refrigerant Pressure Sensor Replacement](#).

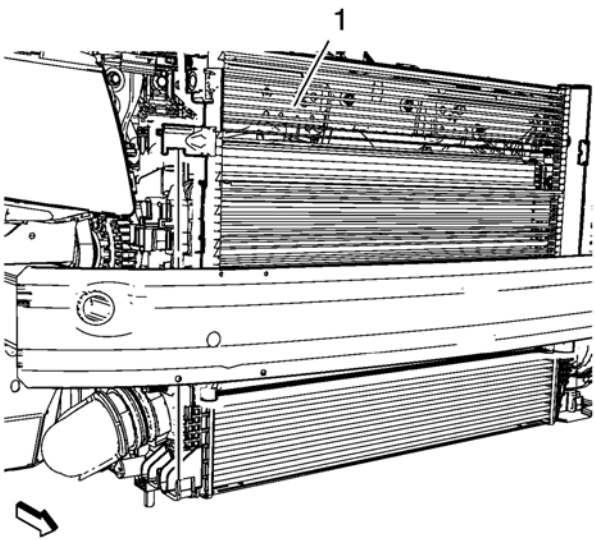

9. Remove condenser.

Installation Procedure