


Hood Hinge Replacement

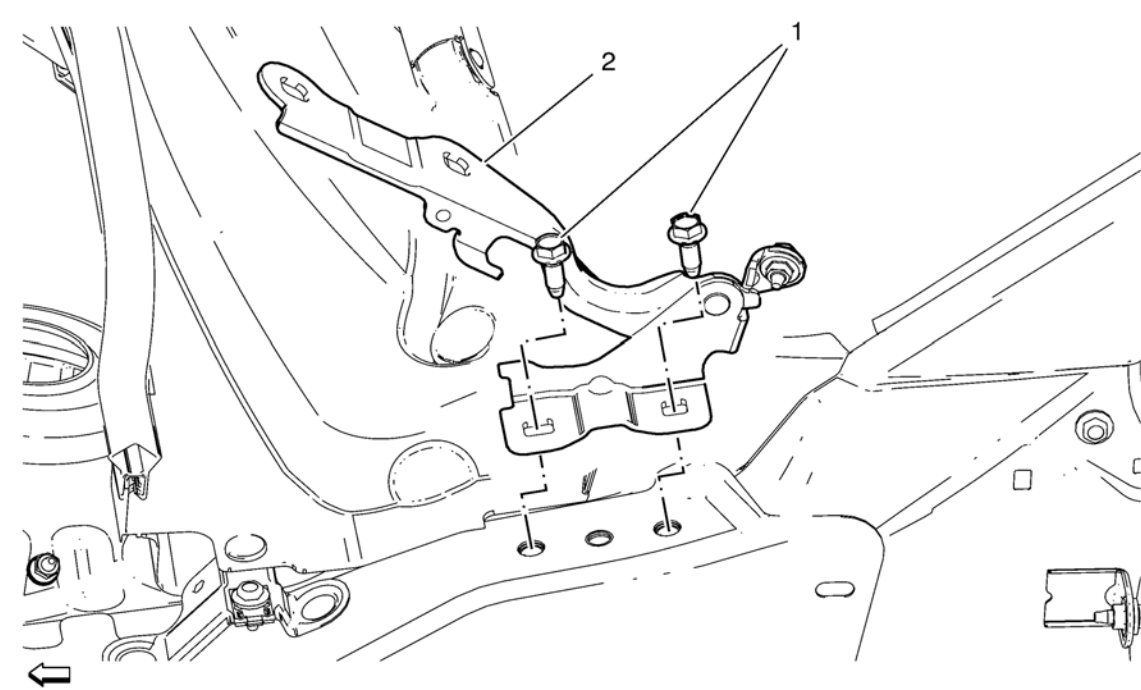

Callout	Component Name
Preliminary Procedure 1. Remove the hood. Refer to Hood Replacement . 2. Remove the front fender. Refer to Front Fender Replacement .	
1	Hood Hinge Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 26 N·m (19 lb ft)
2	Hood Hinge