


Turn Signal Switch Replacement

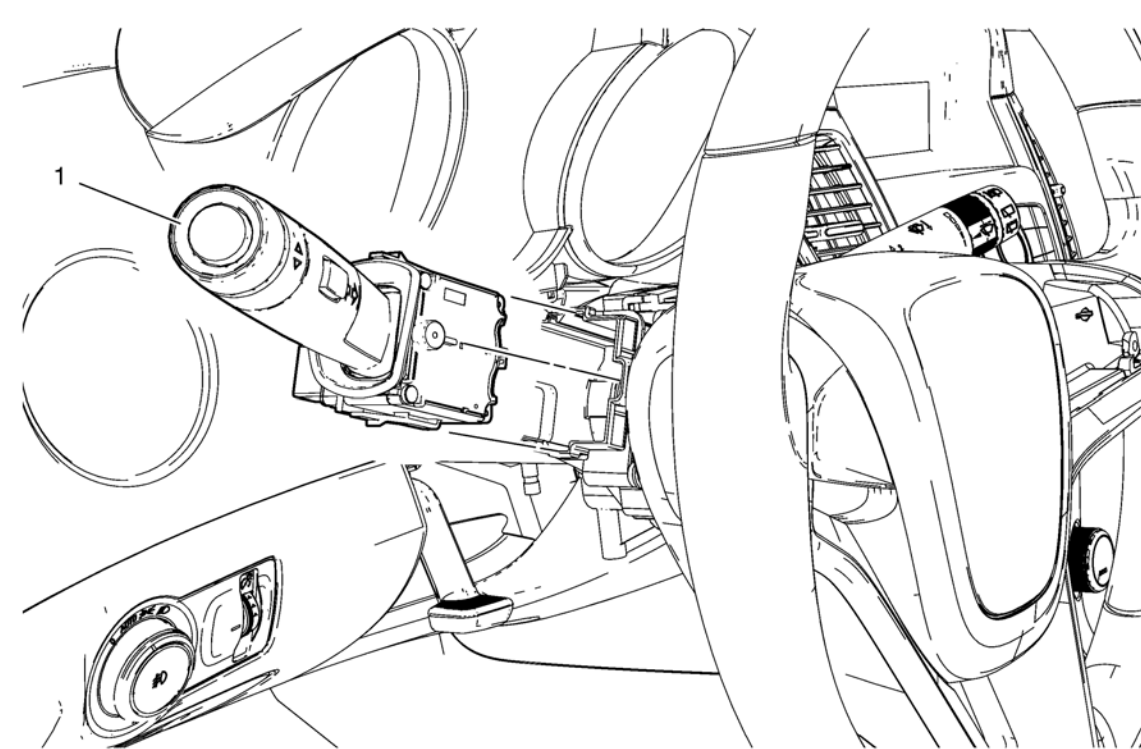

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the steering column upper trim cover. Refer to Steering Column Upper Trim Cover Replacement.</p> <p>2. Remove the steering column lower trim cover. Refer to Steering Column Lower Trim Cover Replacement.</p>	
1	<p>Turn Signal Switch</p> <p>Procedure</p> <p>1. Disconnect any electrical connectors as needed.</p> <p>2. Release the plastic retaining tabs to release the turn signal switch from steering wheel inflatable restraint module coil.</p>