


Steering Wheel Replacement

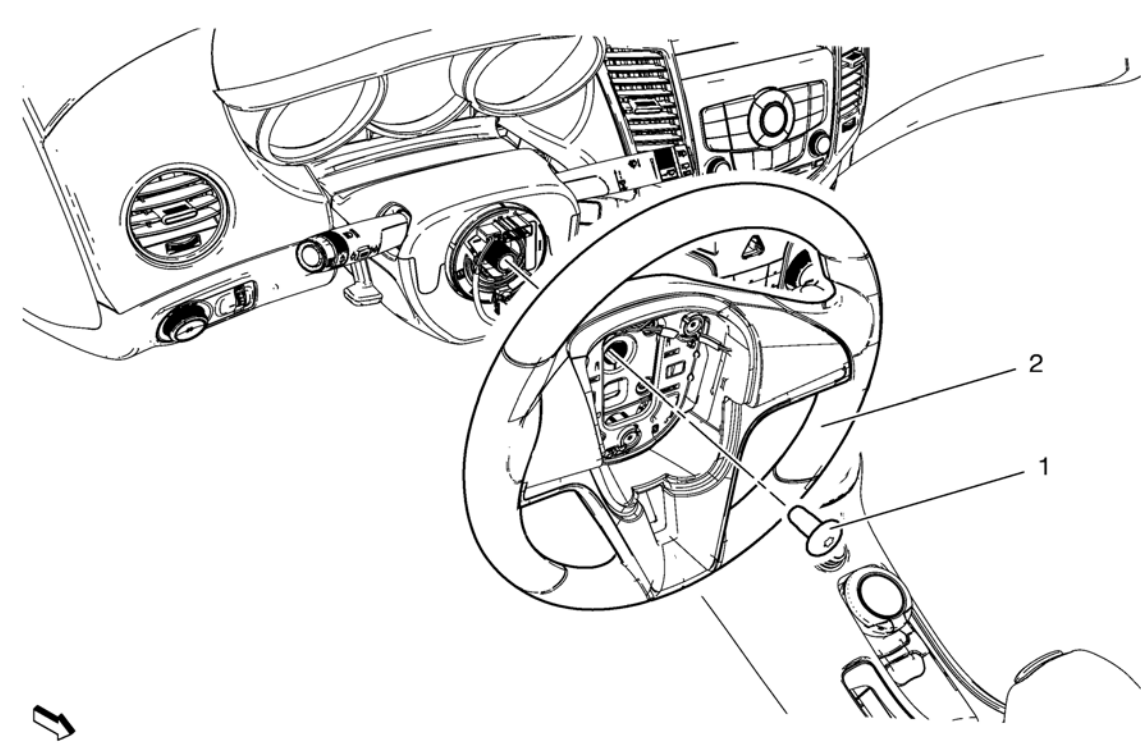

Callout	Component Name
Preliminary Procedure Remove the inflatable restraint steering wheel module. Refer to Steering Wheel Inflatable Restraint Module Replacement .	
1	<div>Steering Wheel Bolt</div> <div>Caution: Refer to Fastener Caution in the Preface section.</div> <div>Procedure<div><div>1. Clean thread of the bolt.</div><div>2. Apply locking compound to the thread. Refer to Adhesives, Fluids, Lubricants, and Sealers</div></div></div> <div>Tighten 30 N·m (23 lb ft)</div>
2	<div>Steering Wheel</div> <div>Procedure<div><div>1. Disconnect electrical connectors as needed.</div><div>2. Remove the steering wheel carefully.</div></div></div>