


## Front Floor Console Rear Cover Replacement

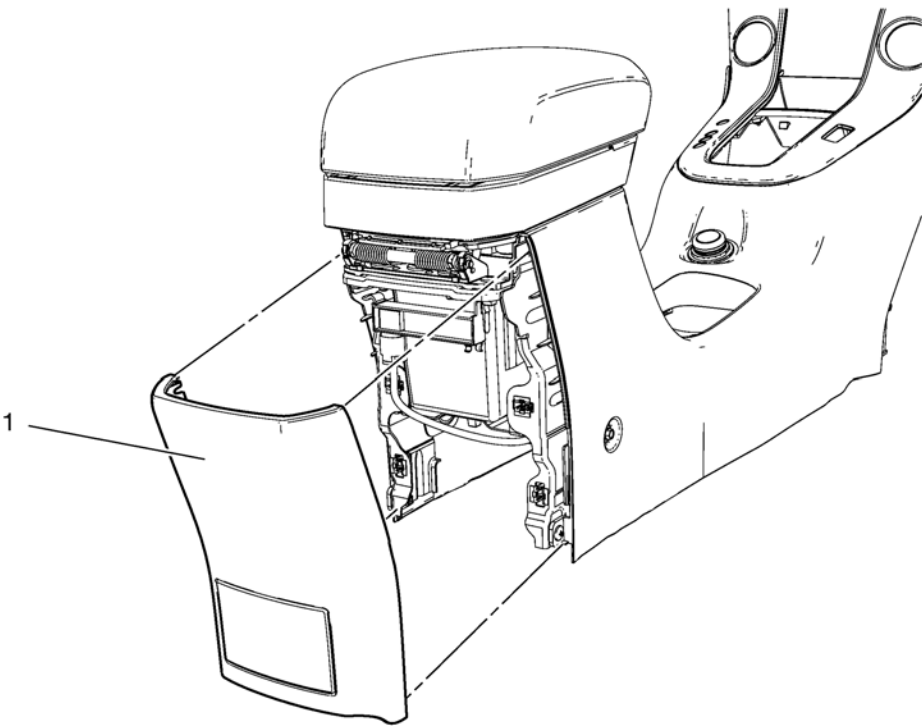

Callout	Component Name
1	<div>Front Floor Console Rear Cover Assembly</div> <div><b>Procedure</b><div><div>1. Grasp the cover assembly and pull rearward disengaging the retainer clips securing the cover to the floor console.</div><div>2. Disconnect the electrical connections.</div><div>3. When replacing the front floor console rear cover assembly, transfer all necessary components.</div></div></div>