




10. Remove the power steering fluid cooling pipe bolt (1), clip out (2) and securing the power steering fluid cooling pipe (3) to the vehicle.
11. Remove the lower ball joints from the steering knuckles. Refer to [Lower Control Arm Replacement](#).

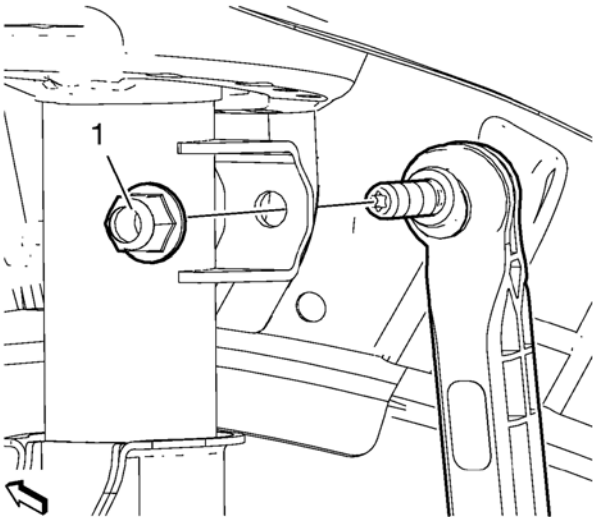

12. Remove the stabilizer link nut (1) from the strut.
13. Remove the outer tie rods and tie rod nuts from the steering knuckles. Refer to [Steering Linkage Outer Tie Rod Replacement](#).

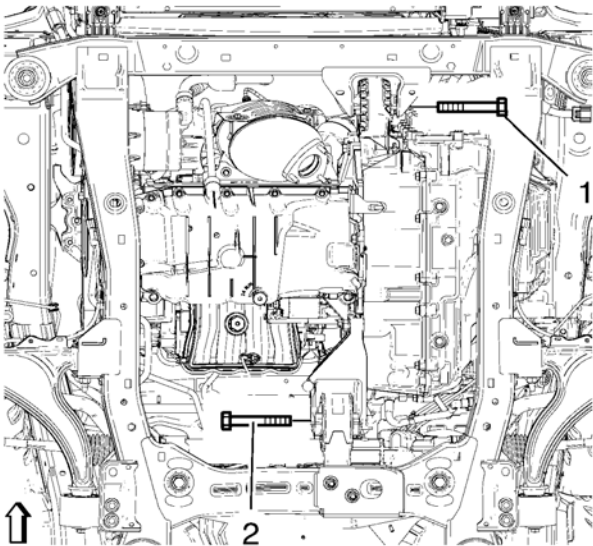

14. Remove the front (1) and the rear (2) transmission mount bracket bolts.

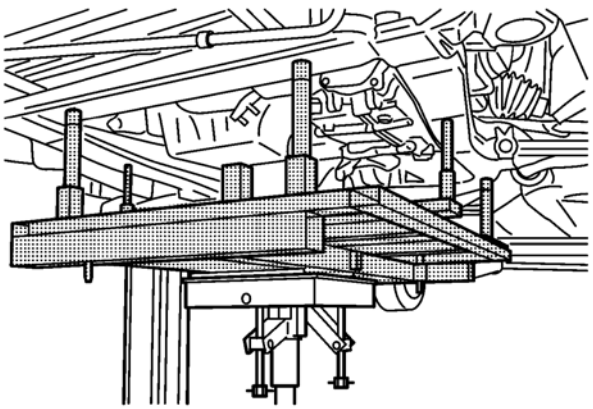

15. Raise the CH 904 frame and CH 49289 adapter with the hydraulic jack until it contacts the frame.
16. Turn the front wheels to the straight forward position and secure the steering wheel from moving.