


Driver or Passenger Seat Belt Buckle Replacement

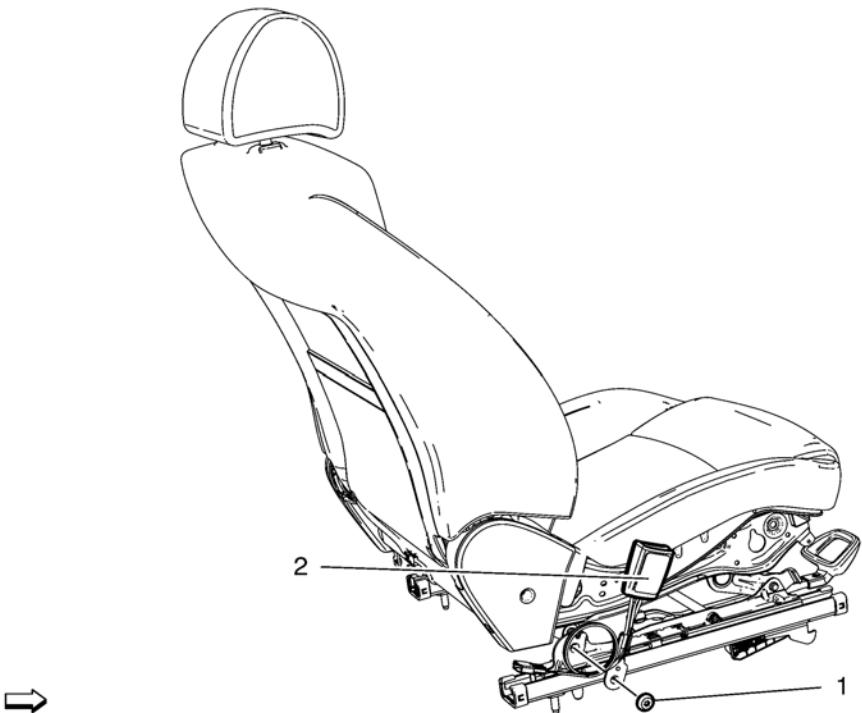

Callout	Component Name
Preliminary Procedure Remove the front seat. Refer to Driver or Passenger Seat Replacement .	
1	Front Seat Belt Buckle Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 45 N·m (33 lb ft)
2	Front Seat Belt Buckle Assembly