


Headlamp Replacement

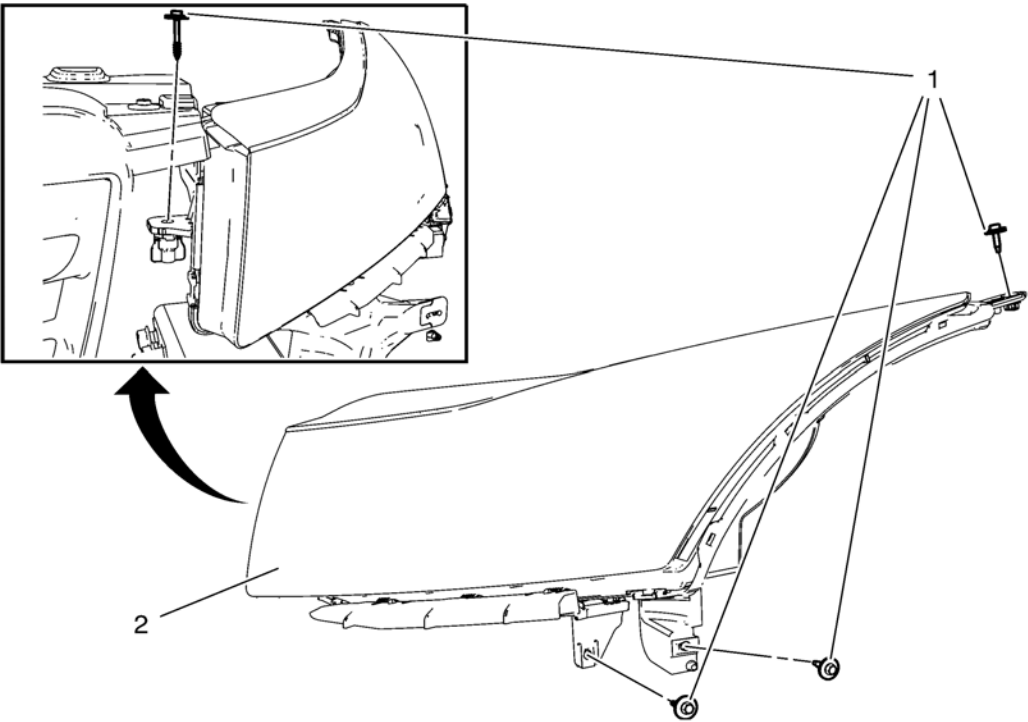

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the front bumper fascia upper bracket. Refer to <a href="#">Front Bumper Fascia Replacement</a>.</p>	
1	<p>Headlamp Screw (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tip</b> Secure the headlamp fasteners in sequence, as indicated.</p> <p><b>Tighten</b> 2.5 N·m (22 lb in)</p>
2	<p>Headlamp Assembly</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"><li>1. Pull forward on the outside edge of the headlamp in order to release the up and down locator tabs on the backside of the headlamp.</li><li>2. Pull forward on the top inside edge of the headlamp to release the inboard up/down locator.</li><li>3. Pull the headlamp assembly down.</li><li>4. Pull the headlamp assembly forward far enough to access the electrical connection.</li><li>5. Disconnect the headlamp electrical connector from the forward lamp harness connector.</li><li>6. Remove the headlamp assembly.</li><li>7. Aim the headlamps after installation. Refer to <a href="#">Headlamp Aiming</a>.</li></ol>