


Front Side Door Lock Cylinder Replacement

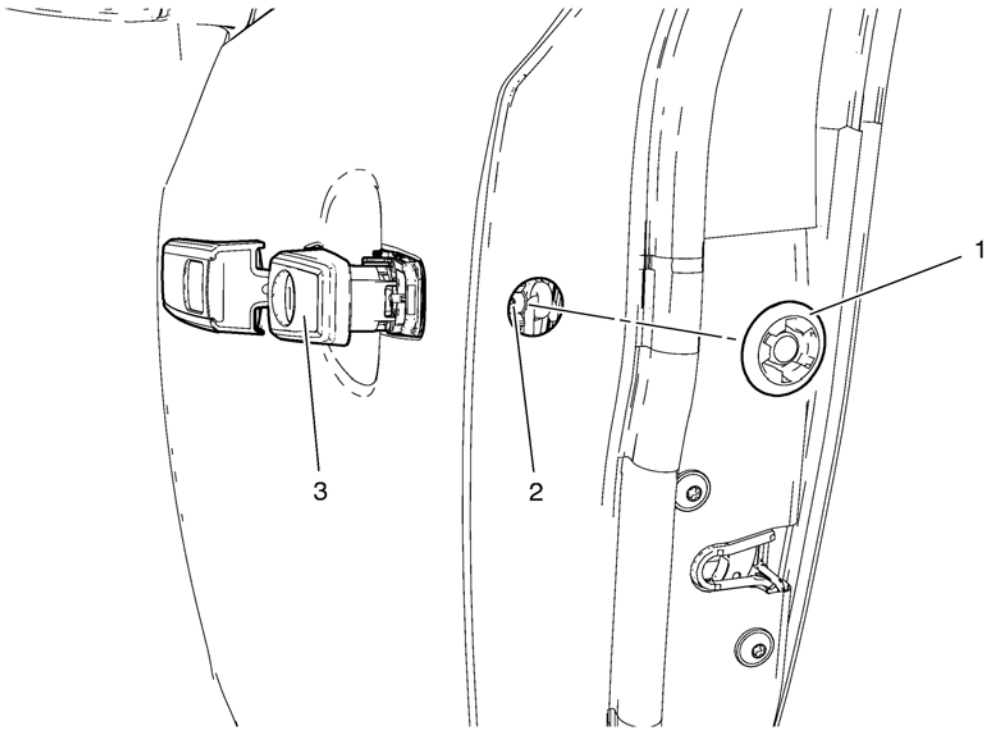

Callout	Component Name
1	<div>Bolt Access Plug</div> <div>Procedure</div> <div>Use a plastic flat-bladed tool to remove.</div>
2	<div>Front Side Door Outside Handle Bolt</div> <div>Caution: Refer to Fastener Caution in the Preface section.</div> <div>Tighten</div> <div>9 N·m (80 lb in)</div>
3	<div>Front Side Door Lock Cylinder</div> <div>Procedure</div> <div><div>1. Pull the lock cylinder from the housing to remove.</div><div>2. Inspect the lock, lock cylinder and handle adjustments. Refer to Front Side Door Outside Handle Rod Adjustment.</div></div> <div>Tip</div> <div>Pull the front side door outside handle to unlock the door lock cylinder.</div>