


- 16. Install the inlet and outlet hose (2) to the steering gear (3).
- 17. Install power steering gear inlet and outlet hose bolts (1) and tighten to **11 N·m (97 lb in)**.

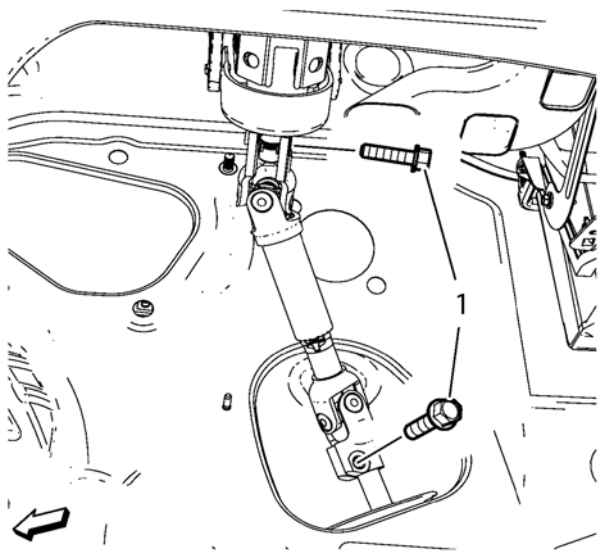

- 18. Install the lower steering intermediate shaft (1) bolt and tighten to **34 N·m (25 lb ft)**.
- 19. Remove the support of the radiator and condenser.
- 20. Lower the vehicle on a hoist. Refer to [Lifting and Jacking the Vehicle](#).
- 21. Install the tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#).
- 22. Install the exhaust flexible pipe. Refer to [Exhaust Flexible Pipe Replacement](#).
- 23. Install the front bumper fascia opening lower cover. Refer to [Front Bumper Fascia Opening Lower Cover Replacement](#).
- 24. Install the engine splash shields. Refer to [Front Compartment Splash Shield Replacement](#).
- 25. Install the front compartment insulator, if equipped. Refer to [Front Compartment Insulator Replacement](#).
- 26. If replacing the frame, check the wheel alignment. Refer to [Wheel Alignment Measurement](#).