



- 11. Install the steering linkage tie rod. Tighten the steering linkage tie rod nut to **35 N·m (26 lb ft)**.
- 12. Install the lower ball joints to the steering knuckles. Refer to [Lower Control Arm Replacement](#).

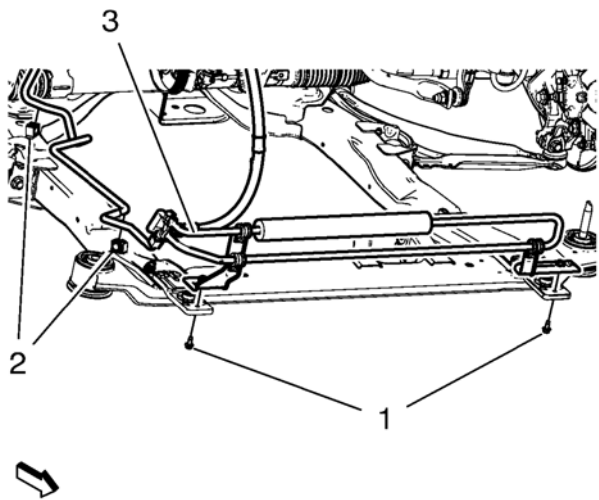

- 13. Install the power steering fluid cooling pipe (3) to the frame, install the power steering fluid cooling pipe bolt (1) and clip in (2). Tighten the power steering fluid cooling pipe bolt to **9 N·m (80 lb in)**.

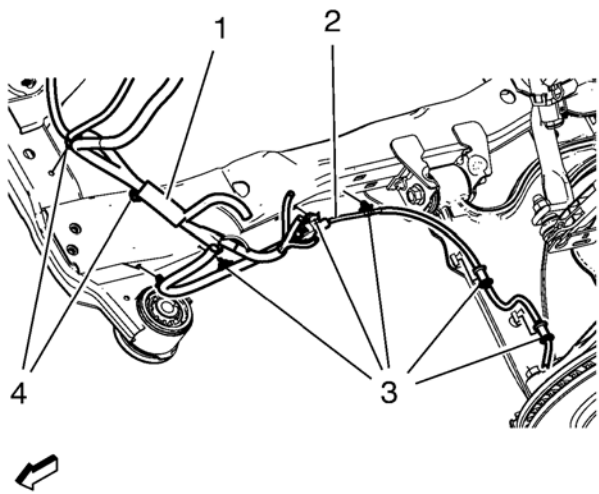

- 14. Install the wheel speed sensor wiring harness (2) to the frame on both sides.
Install the wiring harness retainers (3) to the frame and the lower control arm.
- 15. Install the radiator wiring harness (1) to the frame.
Install the wiring harness retainers (4) to the frame.