


## Driver or Passenger Seat Head Restraint Replacement

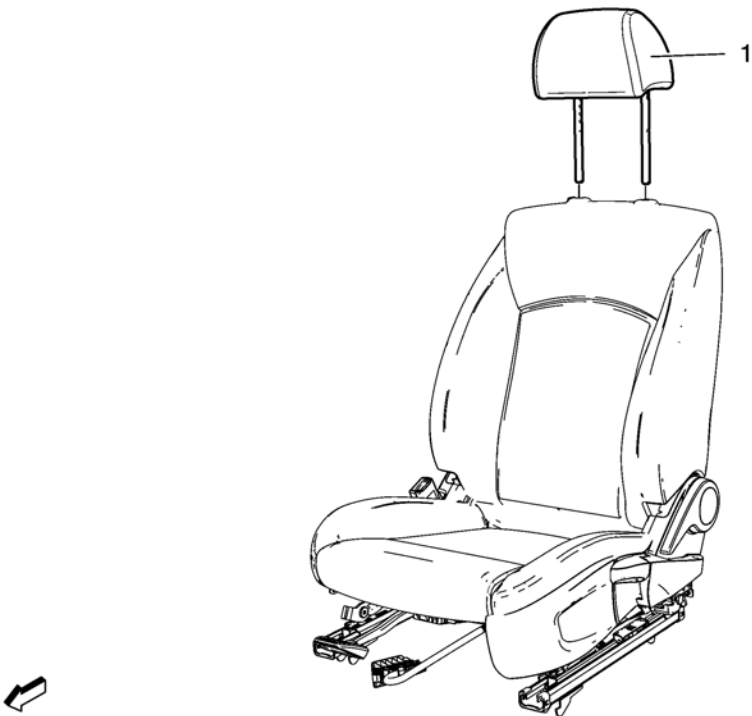

Callout	Component Name
1	<div>Front Seat Head Restraint</div> <div><b>Procedure</b><div><div>1. Raise the headrest to the full upward position.</div><div>2. Depress the flush button on the head restraint guide.</div><div>3. Remove the head restraint by pulling up on the restraint.</div></div></div>