



7. Remove the front wheel bearing/hub (1) and front brake shield (2) from the steering knuckle.

Installation Procedure

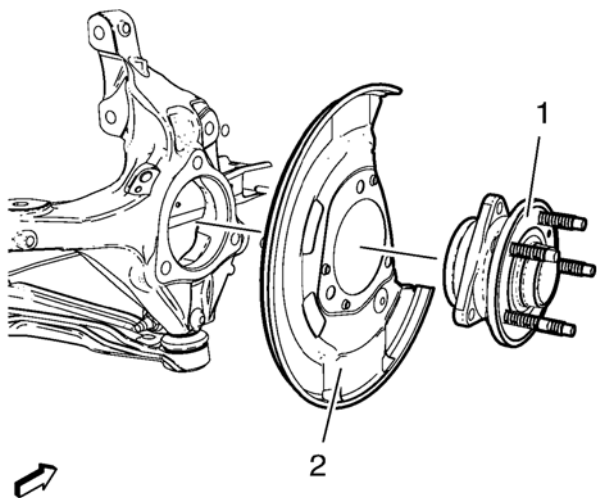

1. Position the front brake shield (2) and front wheel bearing/hub (1) assembly in the steering knuckle.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

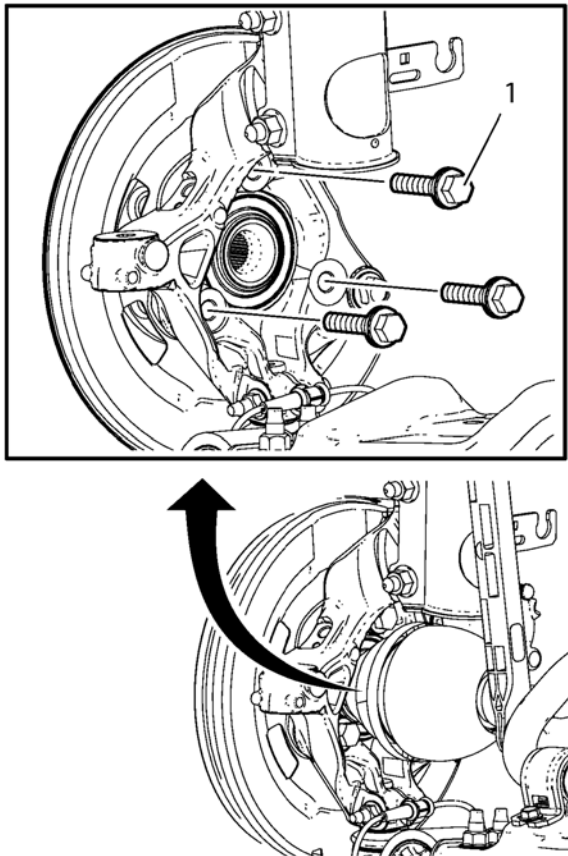

2. Install the NEW front wheel bearing/hub bolts (1).
3. Tighten the bearing/hub bolts (1) in 3 passes. Use the *EN-45059* kit .
- First pass to **90 N·m (67 lb ft)**
  - Second pass to **60°**
  - Third pass to **15°**
4. Install the wheel drive shaft at the front wheel bearing/hub. Refer to [Front Wheel Drive Shaft Replacement - Left Side](#) or [Front Wheel Drive Shaft Replacement - Right Side](#).

