


- 8. Remove the upper strut mount nut (1), use the *CH 49375* wrench .
- 9. Remove the strut mounting plate (2).
- 10. Separate the front strut from the knuckle.
- 11. Remove the front strut assembly from the vehicle.
- 12. For servicing the individual strut components, refer to [Strut, Strut Component, or Spring Replacement](#).


Installation Procedure

- 1. Install the front strut assembly.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

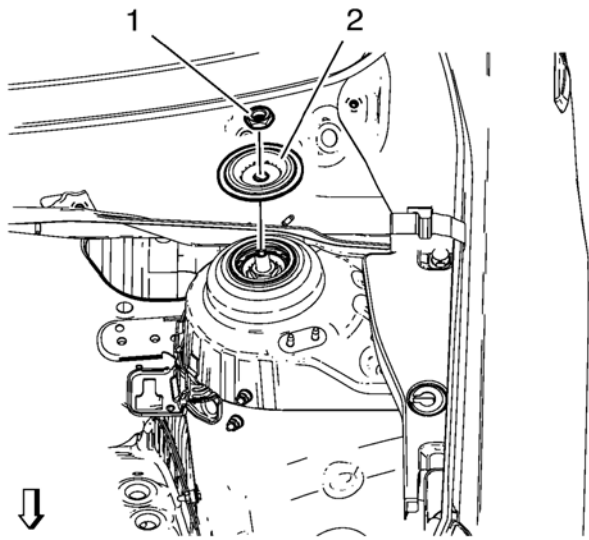

- 2. Install the strut mounting plate (2).
- 3. Install the upper strut mount nut (1), using the *CH 49375* wrench and tighten to **45 N·m (34 lb ft)**.

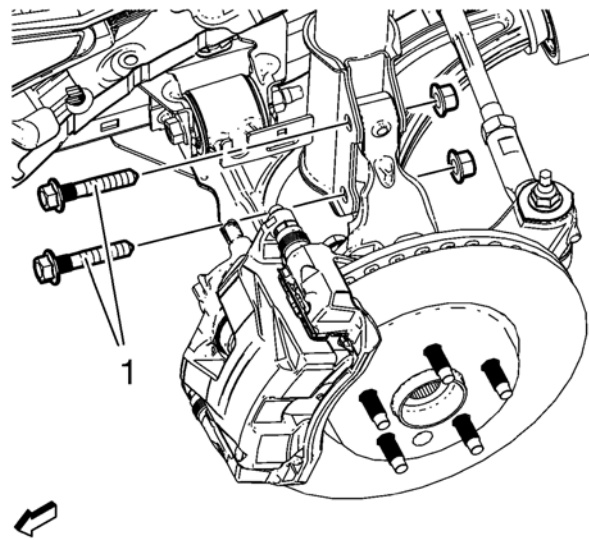

- 4. Insert the front strut in the knuckle.
- 5. Install the steering knuckle nuts and bolts (1) and tighten to **90 N·m (66 lb ft) +60-70 degrees**.